

# Fantasy20

## Digital Guitar Amplifier



*English/Chinese Owner Manual*

## 特别隐藏功能

当你开机的时候选择任意一款功放模式,此机器都会自动为你匹配合适的乐音及效果,但是如果你不想其为你自动选择效果,你可以在开机前按住ULTRA功放模式的按钮不动,直到开机后,但是下一次如你不重复此方法,机器将回复到自动选择模式.

另外你可以在开机前按住Clear功放模式的按钮直到开机,这样你会恢复本机到原厂设置状态.

警告:一旦你这样做了,所有你在此机调好的效果和音质将会被清除掉,你一定要确定你真的不想要你调好的音质和效果.



The exclamation point within a triangle means, "Caution!" Please read the information next to all caution sign



The lightning symbol within a triangle means, "Electrical caution!" It indicates the presence of information about operating voltage and potential risks of electrical shock.



This symbol within a triangle means, "Caution! Hot surface!" It is shown in areas that may become too hot to touch when the device is in operation.



You should read these Important Safety Instructions.

Keep these instructions in a safe place.



Before using your Guitar Amps, carefully read the applicable items of these operating instructions and the safety suggestions

1. Obey all warnings on the amp and in the Amps Manual.
2. Connect only to AC power outlets rated 115V or 230V 50-60Hz (depending on voltage range of the unit:refer to back panel).
3. Do not perform service operations beyond those described in the Guitar Amps Manual. Service is required when the apparatus has been damaged in any way,such as:
  - power-supply cord or plug is damaged
  - liquid has been spilled or objects have fallen into the apparatus
  - the unit has been exposed to rain or moisture
  - the unit does not operate normally or changes in performance in a significant way
  - the unit is dropped or the enclosure is damaged.
4. The bottom of the metal chassis can get hot during operation. Do not touch during operation or shortly after.
5. Do not place near heat sources, such as radiators, heat registers, or appliances which produce heat Keep the rear of the unit at least three inches from walls or other items that might block heat radiation.
6. Do not block any of the ventilation openings or use in an enclosed space.
7. Guard against objects or liquids entering the enclosure. Do not use or place unit near water.
8. Do not step on power cords. Do not place items on top of power cords so that they are pinched or leaned on.Pay The exclamation point wthin a triangle means, "Caution!" Please read the information next to all caution signs.

particular attention to the cord at the plug end and the point where it connects to the amp.

9. Unplug the amp when not in use for extended periods of time. Unplug the amp during lightning storms

10. Clean only with a damp cloth.

11. Do not defeat the safety purpose of the grounding type plug. A grounding type plug has two blades and a third grounding prong. The third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

12. Only use attachments/accessories specified by the manufacturer.

13. Prolonged listening at high volume levels may cause irreparable hearing loss and/or damage. Always be sure to practice "safe listening".

The Fantasy 20 delivers 15 watts of output through a special design 8" Coolmusic custom speaker.

This advanced DSP smart guitar amp has compact size, and good looking, is perfect for home practice and band rehearsals alike.

There are 4 lead amp model that includes Clean, Crunch, Metal and Ultra, also 6 digital effects, including reverb, delay, phaser, flanger, chorus and tremolo, Build in Mp3 player and blue tooth allow you play music while playing guitar.

## Digital Guitar Amplifier

### FEATURES:

1. 20 watts guitar amp with 8" Coolmusic custom high-performance speaker
2. 4 lead amp model that includes Clean, Crunch, Metal and Ultra
3. 6 DSP digital effects that includes reverb, delay, Phaser, flanger, chorus and tremolo.
4. 3-band EQ that includes bass, mid and treble knobs
5. Build in MP3 player allows palyers to be connected for Jam-along fun,while the on board Tuning Fork lets you tune your guitar without unplugging
6. 4 memory channels store differ presets that you prefer

靠调节第一个旋钮你可以选择移相(Phaser)合唱/镶边(Chorus/Flange)颤音(Tremolo)三种效果、并且每一种效果可用旋钮去调节大小.在第二个旋钮你可以选择扫过回响(Sweep Echo)磁带回响(Tape Echo)混响(Reverb)三种效果,同样每一种效果也可用旋钮去调节大小.当你选择一个回响效果的时候,延迟指示灯(Delay time light)就会闪烁,你可以按延迟按钮(Delay)去调节延迟时间的长短.

### 6. 延迟控制(Delay time)

可以通过按这个延迟按钮(Delay)最少两次去改变延迟时间的长短,当选择磁带回响或扫过回响效果时,这个指示灯会亮起,当选择混响效果时,此指示灯会熄灭.

### 7. 总音量旋钮(Master Volume)

你可以使用这个旋钮去调节整个功放的声音大小,在不影响你的调好的音质的前提下.

### 8. CD mp3输入(CD/MP3 in)

通过这个接口,你可以将外部音源(CD或MP3)输入吉他音箱进行播放.

### 9. 耳机和录音输出(Headphone/Record out)

通过这个接口,你可以带耳机来聆听你的弹奏,同时此接口也可以做为专门的录音输出接口.(请注意,当你使用这个接口的时候,吉他功放将处于静音状态).

### 10. 蓝牙, 录音, MP3, FM (Bluetooth/Record/MP3/FM)

在总音量旋钮(7)右边我们可以看到此块功能面板,在开机后该功能面板是处于休眠的模式下通过长按Mode键切换的,切换时会有语音提示.进入蓝牙模式后,打开设备搜索到本机的蓝牙对接,设备连接上后会有提示音,方便舒适的为你送上美妙的乐曲,在录音模式下,插入U盘按一下Mode键开始录制你的弹奏,双击Mode键保存,在进入MP3模式后,可以用Mode键来控制歌曲的播放与暂停,轻按一下V-可以切换到上一首,V+为下一首,长按V-可以减小音量,长按V+可以增大音量(V-/V+的功能同样适用于蓝牙模式)在FM模式下,你可以通过V-/V+对频道进行切换,收听你喜欢的节目

### 11. 脚踏开关 (Foot SW)

当你在弹唱时,可用脚踏开关连接这个窗口,对效果频道进行切换,更方便的演绎出美好的音乐

延迟按钮的附加功能(Delay time):

这个按钮除了可以调节回响效果延迟时间的长短,另外还可以用它加大失真的效果,及启动一个内置的噪声门功能.

加大失真功能(Distortion Boost):

当你旋转GAIN钮向上超过12点钟方向的时候,按住Delay钮不动,这时Clean功放模式下的指示灯将会亮起指示加大失真的功能已经被启动,这样做之后你会得到近似于在踏板效果器上能得到的失真效果,因为这种模式在信号进入功放工作模式之前,加大了你吉他的信号,因此你可以获得更好的失真效果.


噪声门功能:

当你旋转echo/reverb FX旋钮向上超过12点钟方向的时候,按住 Delay钮不动,当ULTRA功放模式下的指示灯亮起的时候,其指示噪声门的功能已经被启动,这个内置的噪声门将消除来自于音箱的嘶嘶声和噪音

## FANTASY20系列吉他音箱使用手册

谢谢你选择使用我们的FANTASY20系列吉他音箱,我们的工程师和艺术家经过多年对电吉他发声的测试和研究,最后终于可以将电吉他发声诸多特性和优点融入到FANTASY20系列吉他音箱之中,所以我们可以保证我们最新的FANTASY20系列吉他音箱能够发出最优美的声音—无论是低音,或是高音,我们的FANTASY20系列吉他音箱都能够对他们进行完美的处理,并还原给你美妙的声音。

在使用之前请仔细阅读本产品说明书以确保你个人和产品的安全

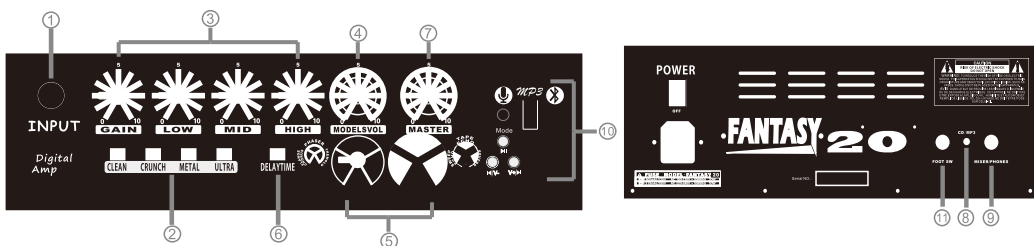

### 1. 吉它线插入孔 (INPUT)

吉他线由此插入

### 2. 频道记忆/功放模式 (AMP MODELS)

以下的四个频道每一个采用了一个不同的功放模式并且它们都带有原厂设定和调好的乐音,只要你按下以下四个键的任意一个你就可以听到相关功放模式下原厂设定的乐音,如果你用自己调试的声音去代替原厂的的声音,你只需要在调好声音后按住相关功放模式的按钮不动两秒后松开,当按钮指示灯闪烁后就代表你调好的乐音已经被贮存进了记忆体,当下次开机时此频道展示的将是你已调好的乐音。

### 3. 乐音控制旋钮 (TONE CONTROLS)

在吉它插孔(1)的右侧我们可以看到Gain(增益),LOW (低音), MID(中音)和 HIGH (高音)四个音乐调节旋钮,其中Gain(增益)旋钮就像是我们在其它功放的音量调节旋钮,通过调节这个旋钮我们可以调节在不同功放模式下的乐音大小,另外我们还可以通过另外三个旋钮,低音,中音和高音去调节各个频道下的乐音,以致达到你想要的完美声音,当然调完后我们可以用频道记忆按钮去存贮。


### 4. 频道声音旋钮 (MODEL VOL)

此个控制旋钮能帮助你平衡在ELITE系列产品功放模式和效果模式下贮存的乐音,看介绍(2)去了解如何存贮你喜爱的乐音到不同的功放模式下。

### 5. 智能效果控制 (SMART EFFECT CONTROL)

靠旋转以上的两个旋钮能快捷而方便的获得你所需要的效果,并且最多可以在同时使用两种效果。

--

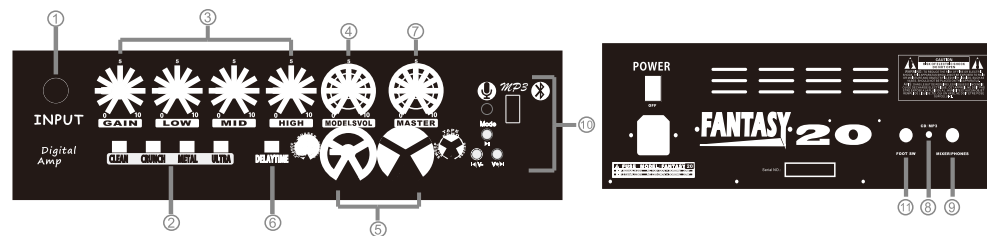

### 1. Plug In Here

### 2. Amp Models

The four Amp models each use a different Amp Model, and all come pre-loaded with a factory favorite and a great tone. Press one of these buttons to hear the presets. To replace any preset with your own tone and effect press and hold one of these four buttons for 2 seconds, the light flashes when the save is complete.

### 3. Tone Controls

Gain control how much "dirt" you get in your sound. Bass, Mid, and Treble controls are customized models to give you best tonal control.

### 4. Models Vol

This control helps you restore your music in amplifier model and effect model of ELITE See (2) above for the lowdown on models.

### 5. Smart Effect Control

Spin one of these knobs to get great effect, fast and easy: The first knob picks chorus/flange, phaser a range of settings—from subtle to overpowering—for each effect. The second knob picks tape echo, reverb with a range of mix settings from low to high. When you select an echo effect the Delay Time Delay time light will flash, you can press the delay knob to change the time.

### 6. Delay Time

Press the Delay Time button at least two times to set the delay time when either Tape Echo or Sweep effects The light will be lit solid when Reverb is active, and will be off when no echo or reverb effect is active.

### 7. Master Volume

You can adjust overall volume of the amplifier, without affecting your tone.

### 8. CD/MP3 In

Listen and play along with CD or MP3 tracks by connecting to this 1/8-inch input.

### 9. Headphone/Record Out

--

Listen with headphones, or use this as a direct out for recording!

#### 10. Bluetooth/Record/MP3/FM

Right the Master knob(7) is the mode button, press and hold the button will start up the blue tooth function, in which, you can use your blue tooth devices to search the amp and connect with it. In addition, when you insert a USB, you can start to record your play by pressing model button one time, two time for save it, Under MP3 model, press MODEL controls to paly/pause, click V+ switch next song, click V- switch last one. Press and hold V+ to increase the volume, long press V- to decrease the volume. (also suitable for Bluetooth model).FM Model, Adjacent channel through V+/ V-

#### 11. A foot switch (Foot SW)

But when you're playin foot switch can be used to connect this interface, the effects of channel switching and more convenient interpretation of the beautiful tone.

##### Delay Button Extra Functions

The Delay Time button, not only can set the time of your echo effects, but can also lets you access a Distortion boost and a built-in Noise Gate.

##### Distortion Boost

Press and hold the Delay Time button as you turn the Gain knob up past twelve o'clock, Models light comes on to indicate that the Distortion Boost is on, the you can got a Distortion effects like from pedals.

##### Noise Gate

Press and hold the Delay Time button as you turn the echo/reverb FX knob up past twelve o'clock, Under ULTRA Model, the indicator light comes on, and built-in Noise Gate to help cut down on noise.

##### Special Hidden Functions

When you select an Amp Model, Elite series guitar Amp, automatically sets its tone controls and effects with Amp Model. You can disable the auto-FX selection, (but not tone control auto-selection) by powering ULTRA Model button held. The auto-selection will be re-enabled next time you power up.

You can also reset your series guitar amp's programmable channels to their factory-programmed settings pressing down the CLEAN Channel button as you turn on the power. Warning:this will erase ALL have saved. Please make sure you really want to erase it all of them

## 中 文

### 需要注意的安全事项

特别注意：在你要连接功放的电源时，根据当地的电压在115V或230V(50-60Hz)的电源转换开关上选择你的供电电压. 否则将会烧坏你的设备。

在使用我们的产品时，请你认真地阅读注意的安全事项：

1. 在使用本产品前仔细地阅读操作指南
2. 请好好的保存这本操作指南
3. 请注意所有的警示指南
4. 请按照操作指南去使用本产品
5. 不要在近水的地方操作本产品，例如浴盆，游泳池，潮湿的地下室
6. 请用微湿的抹布进行清洁
7. 请保持本产品通风口和散热口的畅通，不要将本产品放置在靠墙的地方，(最好保持超过16CM的空间)或箱子里，因为这样会影响到本产品的通风和散热.
8. 不要将本产品放置在靠近发热体的附近，例如，电热炉，烤箱等
9. 如果发现插座和本产品的电源线插头不匹配，请不要将本产品插头的地线端拆掉以插入这个本来不匹配的插座里，这样将导致严重的后果，并大大增加了你和本产品受到伤害的机率，我们建议你最好去更换一个匹配本产品插头的插座.
10. 请不要使用任何不是由原厂提供的附件和配件.
11. 当在雷电或你可能长时间不使用本产品的情况下，请将插头拔掉.
12. 考虑到本产品的重量，在搬运本产品时请注意安全操作，不要被压到手指头.
13. 一旦本产品发生故障，请找专业的维修人员进行维修，或将本产品发回购买地，由我们的维修部门处理.
14. 请妥善的保管好电源线，不要将其折叠或刮花.
15. 本产品能够产生极大的声压，所以在使用时一定要注意将音量打到合适的位置，以免给你的听力造成临时，或永久性的伤害