 



COOLMUSIC

Play Coolmusic Be Coolplayer

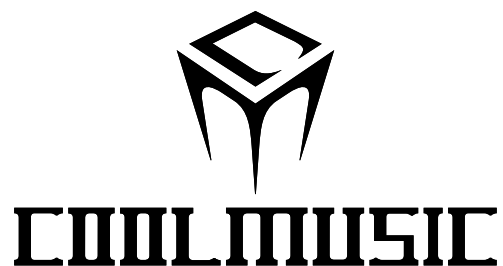

DK35使用说明书

 USER MANUAL

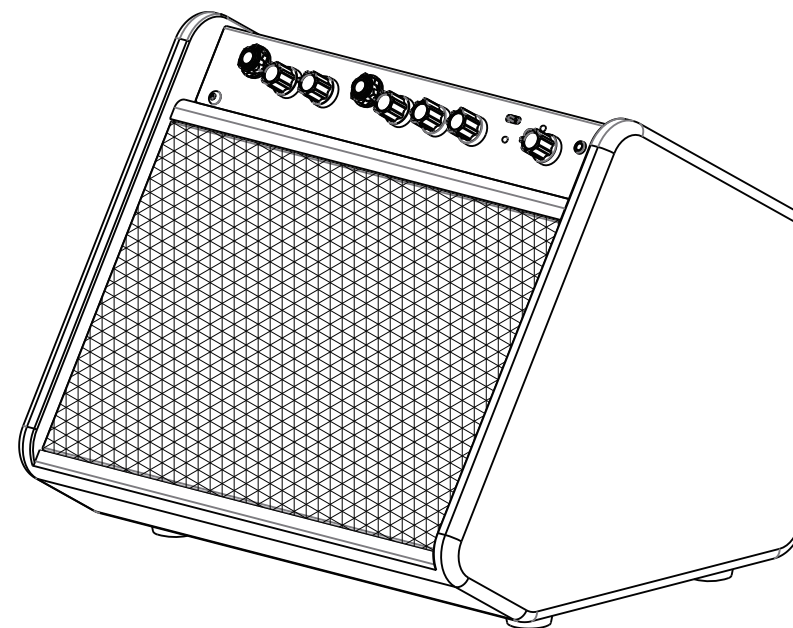

深圳市酷乐科技有限公司

公司官方网站：www.coolmusic-tech.com

品牌：COOLMUSIC 服务热线：0755 - 89344156

地址：深圳市龙岗区园山街道龙腾街28号A栋5楼 邮编：518115

酷乐科技（深圳）有限公司
COOLMUSIC(SHENZHEN)TECH CO.,LTD



Warning! Safety Precautions Please note before using

1. Before using the power, please confirm whether the voltage in the place of use matches the working voltage of the amplifier;
2. Do not disassemble the boot case, otherwise the amplifier may be damaged;
3. Do not repair the machine yourself! Opening the case may expose your body to dangerous voltages. If you need repairs, please find qualified repairs; or repairs by our company's maintenance personnel;
4. If you are a maintenance staff, please note that the equipment needs to be repaired in any case of damage, including: broken and broken power cord, damaged socket head, liquid flowing into the interior of the machine, etc. ;
5. Make sure the electrical outlet in your home is grounded;
6. Do not place objects filled with liquids on the equipment;
7. The place of use of this product should be far away from the sidewalk, and the power cord should be unplugged from the power outlet in time after use;
8. Do not store or use the amplifier in a humid environment;

Other matter

1. Protect the power cord plug from being trampled or stressed;
2. After using the device, please unplug the power cord from the socket;
3. It is normal to have a little heat when using this product;
4. To avoid disturbing your neighbors, please adjust the volume to an appropriate level;
5. When you want to transport the device, please put the device in the packaging box that came with the machine, and then transport it.

音箱参数

额定功率:	35W RMS
输入阻抗:	INPUT MIC 1K INPUT DRUM 100K
耳机输出:	80mw @32Ω
E Q调节范围:	高音@10KHZ 低音@100HZ+/-12db
蓝牙音频:	蓝牙5.2版本, 接收距离10米
扬声器:	低音喇叭6.5寸4Ω, 高音喇叭2.5寸8Ω
接口:	1/4英寸耳机插座 3.5mm耳机插座 type-c插座
电源:	电源适配器输入:100-240VAC;输出:DC21V~3A
尺寸:	300长*250宽*250深/MM

故障诊断

1. 音箱无法发出声音:

音箱的音量旋钮或增益旋钮没有被打开,可以尝试将音箱的所有旋钮调大后再做尝试;

检查一下您的乐器或者手机是否为正常工作状态,若外部设备损坏也可能导致音箱不工作。

2. 蓝牙无法连接:

查看蓝牙是否能正常开启,蓝牙开启时指示灯会闪烁,并伴随有提示音;


若蓝牙的指示灯闪烁之后很快又常亮,则可能是蓝牙已被其他设备连接了;可能是手机的问题,建议使用另外的一部手机去尝试连接音箱的蓝牙。

3. 音箱噪声大:

尝试把所有外接设备拔出,包括各种乐器设备以及音箱的充电线;

检查是否为音箱与周围的其他电器设备相互干扰而导致的噪音。

功能说明

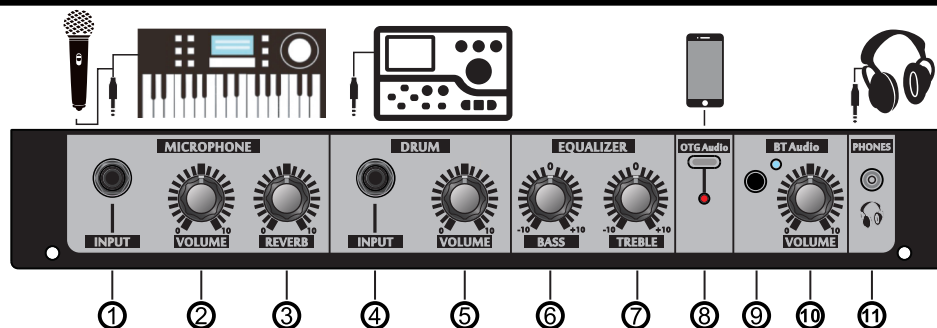

MICROPHONE

- ① • **INPUT:** 麦克风/电子琴等音源输入
- ② • **VOLUME:** 调节增益大小
- ③ • **REVERB:** 调节混响大小

DRUM

- ④ • **INPUT:** 电鼓音源输入
- ⑤ • **VOLUME:** 调节增益大小

EQUALIZER

- ⑥ • **BASS:** 调节低频信号
- ⑦ • **TREBLE:** 调节高频信号

OTG AUDIO

- ⑧ • 使用type-c数据线连接手机/电脑等设备后可进行录音、播放等，亮红色指示灯

BT AUDIO

 
- ⑨ • 长按打开蓝牙，蓝色指示灯闪烁并伴有提示音；连接成功蓝灯常亮；
- ⑩ • **VOLUME:** 调节蓝牙播放音量大小
- 蓝牙名称：DK35

- ⑪ • **PHONES:** 此处连接耳机，连接后扬声器处于静音状态；



- ⑫ • **POWER:** 打开/关闭电源；开机正常为白灯常亮；
- ⑬ • **DC IN:** 电源输入，请使用专用21V~3A电源适配器。

FUNCTION DESCRIPTION

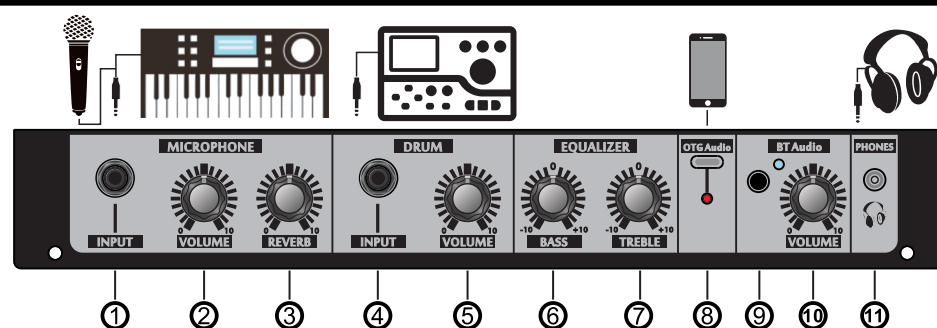

MICROPHONE

- ① • **INPUT:** Mic input
- ② • **VOLUME:** Adjust the gain level
- ③ • **REVERB:** Adjust the level of reverb

DRUM

- ④ • **INPUT:** Drum input
- ⑤ • **VOLUME:** Adjust the gain level

EQUALIZER

- ⑥ • **BASS:** Adjust low frequencies
- ⑦ • **TREBLE:** Adjust treble frequencies

OTG AUDIO

- ⑧ • Once the phone and computer are connected, recordings can be made, played back, and a red light will illuminate

BT AUDIO

- ⑨ • Turn on Bluetooth; the indicator light will blink
- ⑩ • **VOLUME:** Adjust the volume level.
- Bluetooth name : DK35

- ⑪ • **PHONES:** Connect headphones here. speakers: muted state. Connect headphones here. speakers: muted state



- ⑫ • **POWER:** Turn power on/off. Normally, the light stays on continuously when the device is turned on.
- ⑬ • **DC IN:** Please use the dedicated 21V 3A power adapter.

Parameter explanation

Output Power:	35W RMS
Sensitivity:	INPUT MIC 1K INPUT DRUM 100K
Headset Output:	80mw @32Ω
Equalizer:	HIGH @10KHZ LOW @100HZ+/-12db
Bluetooth:	Bluetooth version 5.2, receiving range of 10 meters
Speaker:	Woofer 6.5 inches,4Ω ; Tweeter2.5 INCHS,8Ω
Interface:	1/4-inch socket, 3.5mm socket, Type-C socket
Adapter:	Input voltage :100-240V AC , Out voltage:DC 21V~3A
Size:	300wide*250deep*250high/MM

Fault diagnosis

1. The speaker is unable to produce sound.

The volume or gain knob on the speaker is not turned up. Try increasing the settings on all the knobs on the speaker before attempting again.

Check to see if your instrument or phone is functioning properly. Damaged external equipment could also cause the speaker not to work.

2. Bluetooth connection failure:

Check if Bluetooth is functioning properly. When Bluetooth is enabled, the indicator light will blink, accompanied by a beeping sound.

If the Bluetooth indicator light blinks rapidly and then stays on continuously, it may indicate that Bluetooth has been connected to another device.

It's possible that the issue lies with the phone. I recommend trying to connect the speaker's Bluetooth using another phone.

3. The speaker produces a lot of noise.

Try to disconnect all external devices, including various musical instrument equipment and the charging cables for the speakers.

Check if the noise is caused by interference between the speaker and other electrical devices nearby.



警告！重要的安全事项 通电使用之前请通读以下事项

- 在对音箱进行通电使用之前，请您先确认一下使用场所的额定电压是否与音箱的工作电压相符，以免对您的人身安全造成不必要的伤害或者对机器造成不可修复的损伤；
- 不要试图对音箱做拆机处理，以免导致音箱内部电路的损坏；
- 当音箱损坏时请不要自行维修机器！打开机箱可能使您的身体暴露于危险电压或其他危险情况之下。如需维修或者维护请找有资质的维修人员进行服务；或者将机器发回本公司，由本公司的维修人员进行维修；
- 如果您是具有维修资质的服务人员请注意：
设备在任何被损坏的情况下都需要进行维修服务，其中包括：电源线线缆破损断裂、插座头损坏、液体流入或者固体落入机器设备内部以及设备被放置在潮湿或雨水环境当中等造成机器不能正常工作的情况；
- 确保音箱的电源线所接的电源插座已进行了妥善的接地处理。
- 设备上不应放置诸如花瓶类的装满液体的物品；
- 当需要插入电源线到插座时，应确保远离人行通道，并在使用完毕以后及时将电源线从电源插座上拔下；
- 不要将音箱置于潮湿的环境中存放或使用；

其他注意事项

- 保护电源线不要受到践踏或者重压，特别是插头，以方便以后插拔。
- 当设备长时间不使用的情况下请将电源线从电源插座上拔下；
- 大音量的使用本产品时，若有少许热量产生实属正常现象；
- 为避免干扰您的邻居，请将音量调节到适当的大小；
- 当您想要运输该设备时，请尽量将设备装入本机附带的包装外箱内，而后再对音箱做运输处理。