 


COOLMUSIC

ELECTRIC GUITAR AMPLIFIER

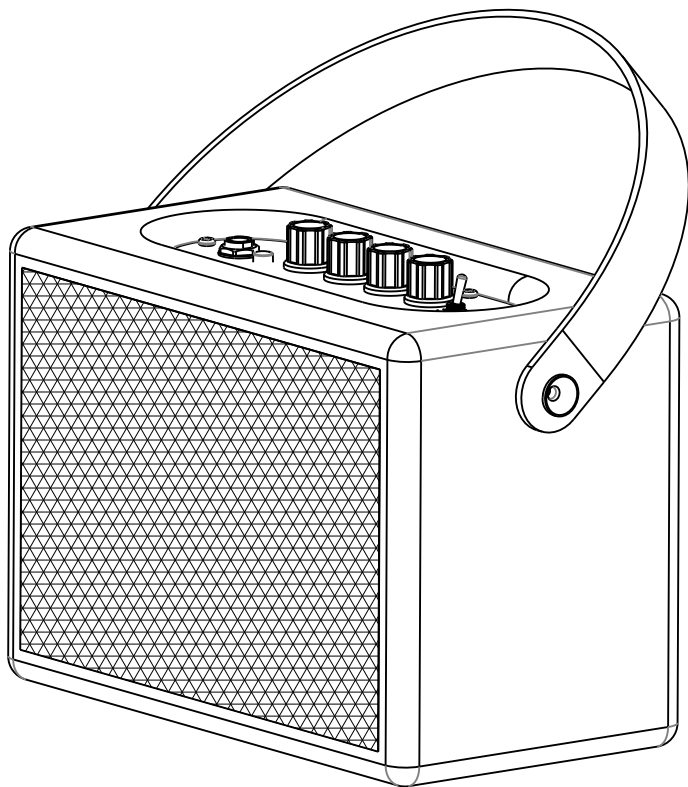

UNIQUE 10G

AMPLIFIER MANUAL

Please Read The Manual

Please follow the instructions below

 
-  **WARNING** Improper use of the device can be dangerous to you
-  **CAUTION** Improper use of the device may result in damage to device

WARNING



- ⇒ Before using this product, please be sure to read the user manual.
- ⇒ Before using the power supply, please connect the power supply interface of the device to a power socket with grounding protection.
- ⇒ Do not disassemble or modify this device and its built-in accessories.
- ⇒ Please use the supplied adapter or power cord. Do not use the supplied adapter or power cord with other devices.
- ⇒ Before use, confirm whether the voltage used by the device is consistent with the mains.
- ⇒ Do not twist or bend the power cord excessively, and do not place heavy objects on it. Doing so may damage the power cord and cause a short circuit.
- ⇒ When using an extension cord, please note that the total power of all devices connected to the extension cord should not exceed the power that the extension cord can withstand, otherwise it may cause risks such as power short circuit or electric shock.
- ⇒ When inserting or unplugging the power cord from the outlet, hold the plug portion of the power cord in your hand.
- ⇒ Please avoid entanglement between the power cord and various wires.
- ⇒ Do not handle the power cord of this device or insert or unplug the power cord from the outlet when your hands are wet.
- ⇒ Before moving the device, unplug the power cord and any cables connected to the device.
- ⇒ Before cleaning the device, turn off the power and unplug the power cord from the outlet.
- ⇒ In the event of thunderstorms, unplug the power plug from the outlet.

CAUTION

- ⇒ Do not place this device in the following locations:
 - a Places where the temperature is too high
 - b damp place
 - c Places with heavy humidity
 - d Places directly exposed to rain
 - e Dusty places
 - f Places with strong vibrations
- ⇒ Immediately turn off the power and unplug it when:
 - a Damaged adapter, power cord or plug
 - b The device emits smoke or an unpleasant odor
 - c The device is directly exposed to rain
 - d Other abnormal reactions of the device

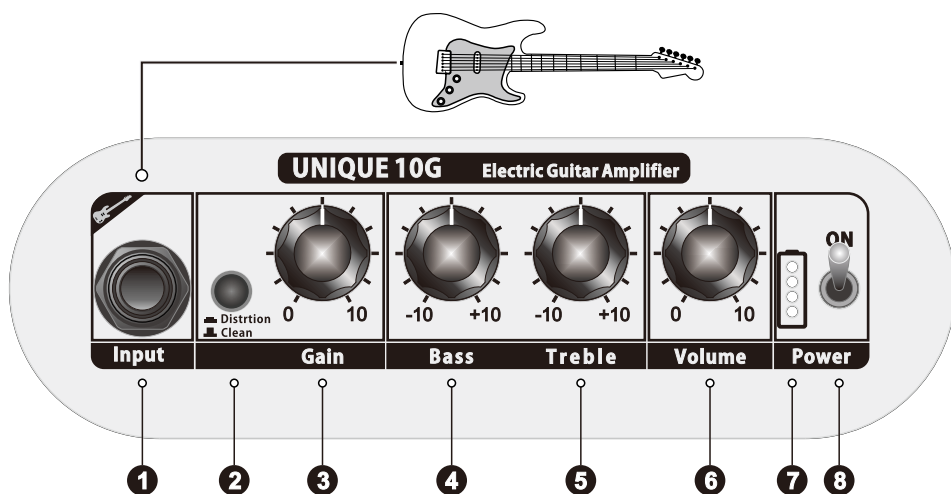

- 1 Input:**
Guitar input interface: This interface is used to connect musical instruments such as electric guitar or acoustic guitar;
- 2 Distrtion / Clean:**
This button is a distortion switch button, and the effect can be turned on after pressing it (applicable to musical instruments such as electric guitars);
- 3 Gain:**
This knob is used to adjust the gain of the distortion effect;
- 4 Bass:**
The knob is used to adjust the low frequency gain of input audio;
- 5 Treble:**
The knob is used to adjust the medium and high frequency gain of input audio;
- 6 Volume:**
The knob is used to adjust the total volume output of the amplifier;
This knob controls the output volume of the headphone port after the headset is connected.
- 7 Power indicator:**
After the power is turned on, the indicator will show the power level of the amplifier; Only one light indicates insufficient power, please charge in time; If all four lights are on, battery is sufficient.
- 8 Power:**
This switch is used to control the 'on/off' of the amplifier power;

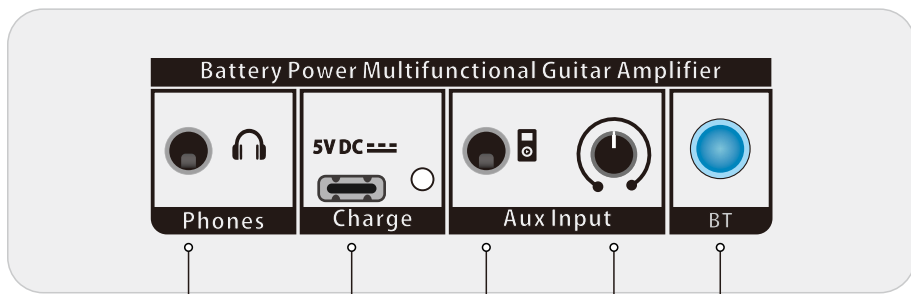  

- 9 **PHONES :**
After the interface is inserted into the earphone, the amplifier will enter the mute mode, at which time the earphone can play the role of monitoring (note: the output volume of the earphone is controlled by the total volume knob, so it is recommended that you lower the total volume knob to an appropriate position before inserting the earphone).
- 10 **Charge:**
When charging the amplifier, please use the power supply device of 'USB-5V'. If the indicator is red, it means that it is charging. If the indicator is green, it is full. (When charging, the power supply device and musical instrument will interfere with each other and produce noise, it is recommended that you do not use this device while charging).
- 11 **Aux input:**
This interface is used to access 'mobile phone, MP3' and other audio devices;
- 12 **VOLUME:**
The volume knob is used to adjust the audio volume input by the 'AUX' interface;
- 13 **BT:**
Press and hold the button to turn on the wireless connection function of the mobile phone, and use the mobile phone to connect the device named "**COOLMUSIC**" to play music; click the button to pause/play the music, and long press the button again to turn off the wireless connection function (**Note:** The blinking button indicates that the phone is not connected to the device, and the steady button indicates that the phone is connected to the device).

Model	UNIQUE 10G
Power	10 W
Charge	USB - 5V
Speaker	4.5 inch
Size	220(L) × 165(W) × 120(H) mm
Weight	2.0 KG
Endurance	4 - 8 hours

请始终遵循以下指示

 
-  **WARNING** 这些指示用于提醒使用者, 本产品的不当使用可能对您造成人身危险。
-  **CAUTION** 这些指示用于提醒使用者, 本产品的不当使用可能会导致设备的损坏。

WARNING

- ➡ 在使用本产品之前, 请您务必先阅读一下用户手册。
- ➡ 在供电使用之前, 请您将设备的供电接口与带有接地保护的电源插座相连接。
- ➡ 请勿自行拆开或改动本设备以及设备的内置附件。
- ➡ 请使用随机附带的适配器或者电源线, 附带的适配器或电源线请勿使用于其他设备。
- ➡ 使用前先确认设备的使用电压与市电是否相符。电压不相符可能导致设备损坏甚至危及人身安全。
- ➡ 电源线请勿过度扭曲或弯折, 也不可以在上面放置重物。否则可能会损坏电源线进而造成线路短路。损坏的电线可能会造成火灾或触电等危险!
- ➡ 请勿将过多的电器与本设备共用一个插座。使用延长线时, 请注意您连接在延长线上所有设备的总功率不可超过延长线所能承受的功率, 否则将可能导致电源短路或触电等风险。
- ➡ 将电源线的插头插入或拔离插座时, 请手握电源线的插头部分。
- ➡ 请避免电源线与各种导线互相缠绕。此外, 也请让儿童远离电源线和导线。
- ➡ 手部潮湿时, 请勿拿取本设备的电源线或将电源线的插头插入或拔离插座。
- ➡ 移动设备之前, 请拔下电源线以及所有与本设备相连接的外部设备连接线。
- ➡ 清洁设备之前, 请关闭电源并从插座上拔下电源线插头。
- ➡ 若打雷天气发生时, 请将电源插头从插座上拔掉。

CAUTION

- ➡ 请勿将本设备放置在以下场所:
 - a 温度过高的场所 (例如阳光直射下的封闭车辆中、热输送管附近或发热机器的上方)
 - b 潮湿处 (例如浴室、洗手间、超市的地面等)
 - c 湿气重的地方
 - d 直接遭雨淋的地方
 - e 灰尘多的地方
 - f 有强烈震动的地方
- ➡ 当发生以下情况时, 请立即关闭电源, 将插头拔掉:
 - a 适配器、电源线或是插头破损
 - b 设备冒烟或产生异味
 - c 本设备直接遭雨淋 (或打湿)
 - d 本设备的其他非正常反应

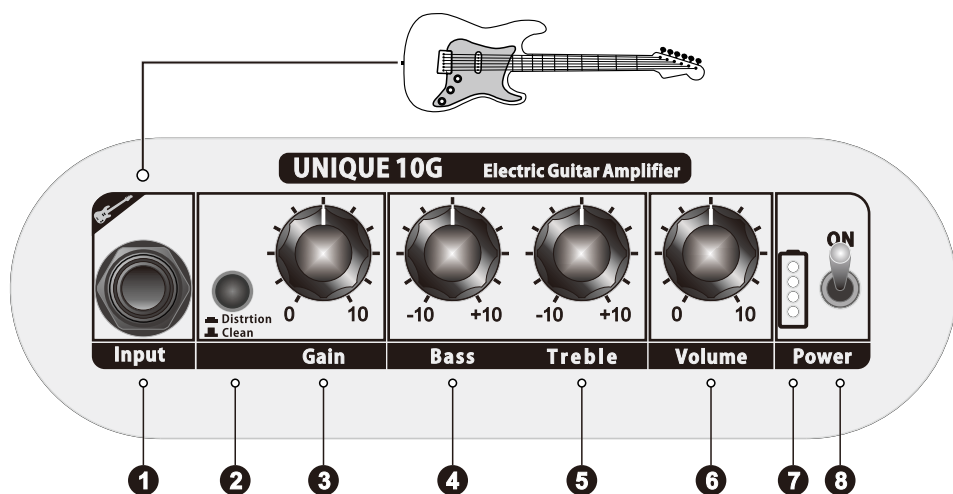

① 输入接口：

吉他输入接口：该接口用于接入电吉他或原声吉他等乐器设备；

② 失真开关：

该按钮为**失真**的开关按钮，按下后即可开启该效果（适用于**电吉他**等乐器设备）；

③ 失真增益旋钮：

该旋钮用于调节失真效果的增益；

④ 低音旋钮：

该旋钮用于调节 'INPUT' 所输入音频的低频增益；

⑤ 中高音旋钮：

该旋钮用于调节 'INPUT' 所输入音频的中高频增益；

⑥ 总音量旋钮：

 
 
该旋钮用于调节音箱输出的总音量；接入耳机后该旋钮将控制耳机接口的输出音量。

⑦ 电量指示灯：

音箱电源打开后，该指示灯将显示音箱的剩余电量；只有一个灯亮表示电量不足，请及时充电；四个灯都亮表示当前音箱电量充足。

⑧ 电源开关：

该开关用于控制音箱电源的 '开启/关闭' ；

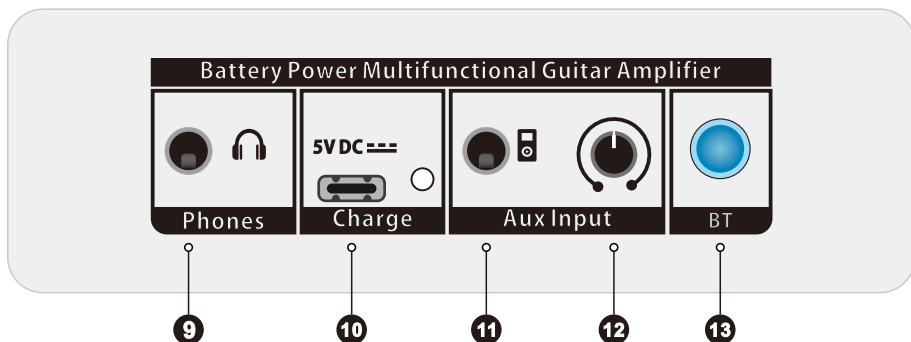

- 9 耳机接口：**
该接口插入耳机后音箱将进入静音模式，此时耳机可以起到监听的作用（注：耳机的输出音量受总音量旋钮的控制，因此在插入耳机之前建议您先把总音量旋钮调小到合适的位置）；
- 10 充电接口：**
给音箱充电时请使用 'USB-5V' 的供电设备，指示灯亮红色表示正在充电，指示灯亮绿色则电已充满；(充电时供电设备与乐器设备会相互干扰进而产生噪音，建议您不要边充电边使用本设备)。
- 11 AUX 输入接口：**
该接口用于接入 '手机、MP3' 等的音频设备；
- 12 音量旋钮：**
该音量旋钮用于调节 'AUX' 接口所输入的音频音量；
- 13 蓝牙按钮：**
长按该按钮可以打开蓝牙，使用手机连接蓝牙名称为"**COOLMUSIC**"的设备后即可播放音乐；连接上设备后单击该按钮可以暂停/播放音乐，再次长按该按钮即可关闭蓝牙（注：按钮闪烁表示手机未连接该设备，按钮常亮表示手机已连接该设备）。

型号:	UNIQUE 10G
功率:	10 W
充电:	USB - 5V
喇叭:	4.5 寸喇叭
尺寸:	220(L) × 165(W) × 120(H) mm
重量:	2.0 KG
续航时间:	4 - 8 小时

COOLMUSIC

CHANGE LIFE WITH MUSIC



品牌：COOLMUSIC

名称：多功能吉他音箱

制造商：深圳市酷乐科技有限公司

服务热线：0755 - 89344156

地址：深圳市龙岗区园山街道龙腾街28号A栋5楼 邮编：518115

公司官方网站：www.coolmusic-tech.com