

COOLMUSIC
CHANGE LIFE WITH MUSIC

DK400

便携式
乐队演出音箱

400W 大功率输出

电源
输出

多乐器
输入

 
内置
效果

U盘
播放

蓝牙
连接

内置
电池

直播
内录

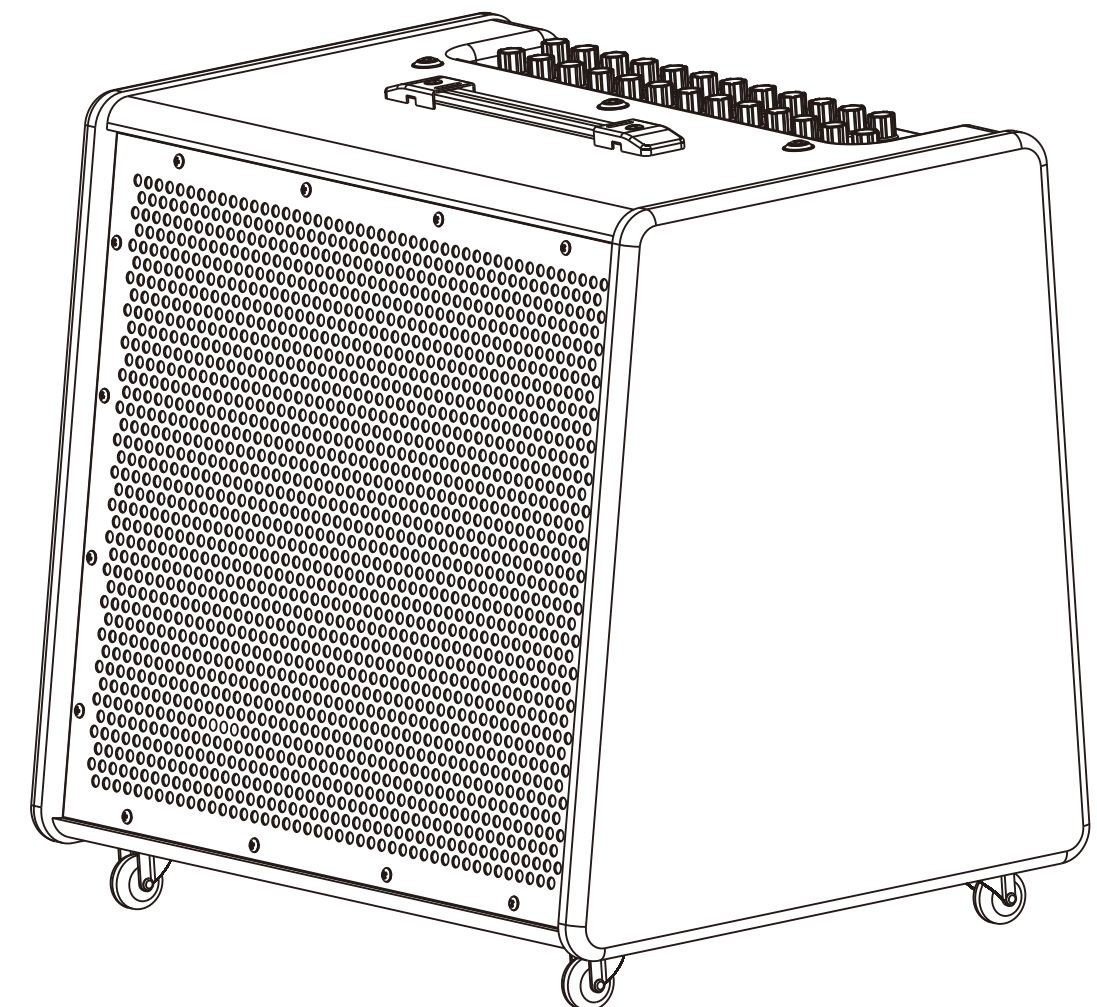

COOLMUSIC
CHANGE LIFE WITH MUSIC



品牌：COOLMUSIC
名称：便携式乐队演出音箱
制造商：深圳市酷乐科技有限公司
服务热线：0755 - 89344156
地址：深圳市龙岗区园山街道龙腾街28号A栋5楼 邮编：518115
公司官方网站：www.coolmusic-tech.com

酷乐科技(深圳)有限公司
COOLMUSIC(SHENZHEN) TECH CO.,LTD

Warning: Follow these basic precautions:

1. Please read the product instruction manual carefully.

2. Pay attention to the warnings mentioned in instructions.

3. Pay attention to the caution mentioned in manual.

4. When using this product, please follow the instructions in the manual.

5. Do not use this product near water.

6. Use a dry cloth when cleaning this product.

7. Do not block or affect the normal ventilation of the unit, please follow the original instructions for installation.

8. This product should be kept away from heat sources such as electric heaters and other devices that generate heat.

9. Please maintain the power cord carefully, do not step on
- or twist the power cord excessively to avoid damage to the power cord.

10. Use only original accessories or designated options.

11. When lightning strikes or the product is not used for a long time, please turn off the power switch and pull out the power plug.

12. For maintenance services, please consult authorized offline agents or online sales customer service. When the product is damaged, such as the power cord or plug is damaged, liquid has been poured into the device, or objects have fallen on the device, or it has been exposed to sunlight, rain, or dropped, please contact an authorized offline agent or online sales customer service.

SAFETY PRECAUTIONS

 **WARNING** Remind users that improper use may be dangerous to you.

 **CAUTION** Remind users that improper use may cause equipment damage.

..... Always follow the directions below

 **WARNING**

USE EQUIPMENT

1. Please do not disassemble the device by yourself, or try to replace the built-in parts of the device.
2. When your hands are wet, do not take the power cord of the device, and also do not insert or unplug the adapter or the plug of the power cord from the power outlet.
3. When inserting or unplugging the plug of the adapter or power cord, hold the plug part of the power cord with your hand.
4. Please follow the instructions in the manual to connect the power supply and peripheral input devices.
5. Please avoid the power cords entangled with each other, and do not place heavy objects on top of the power cords. Otherwise, the power cord will be damaged, resulting in a short circuit, which is dangerous.
6. Do not drop any object or any liquid into the inside of this product.
7. When the following situations occur, please turn off the power immediately and pull out the plug:

a. The plug of the adapter or power cord is damaged;

b. The equipment emits smoke or produces peculiar smell;

c. Foreign objects or liquids fall into the inside of device;

d. The equipment is directly exposed to rain or wet;

e. Other abnormal reactions of the device;
8. Do not place containers or beverages filled with water on the device. Liquid attacking the equipment can cause equipment failure or short circuit.
9. Do not step on the device and do not place heavy objects on the device.

ELECTRICITY SUPPLY

1. Do not let this device share a power socket with other devices that are prone to noise or devices that contain motors. Doing so may cause mutual interference between different devices, resulting in malfunction or noise of the device.
2. The device will have a slight fever after long-term continuous use, which is a normal phenomenon, so there is no need to worry.

3. When the power of the device is turned off, the indicator light will turn off. When you are not using this equipment, turn off the power before unplugging it from the outlet.
4. When using the extension cord, please pay special attention to all the devices you connect to the extension cord, and the total power must not exceed the power that the extension cord can withstand.

 **CAUTION**

PLACE

1. If there are high-power electrical appliances around the device, it may interfere with the device and cause noise. To avoid this phenomenon, you can adjust the placement position, or remove the source of interference.
2. This device may be interfered with by radio or television signals. Do not use this equipment near these receivers.
3. Mobile phones and other wireless communication devices may interfere with this device when answering or making calls. When this happens, please keep the wireless communication device away from this device.
4. Do not expose the device to direct sunlight, or place it in extreme environments such as high heat or poor ventilation. Overheating may cause deformation or damage to the device.
5. When you move the device to a place with a large difference in temperature and humidity, moisture may be generated inside the device. If you use the device in this condition, it may cause the device to malfunction.
6. Do not place this device in the following places:

a. Places where the temperature is too high;

b. Wet place;

c. Places with heavy humidity;

d. Places directly exposed to rain;

e. Dusty places;

f. Places with strong vibration;
7. Please make sure to place the device on a flat place to make sure it is stable. Do not place this device on a stand or on an inclined surface where it may shake.
8. Please place the device, adapter or power cord in a place or direction that does not affect its ventilation.

问题排除

1. **U盘不能播放音乐：**

a. U盘的容量过大，建议你使用容量在 32G 以下的U盘；

b. U盘的格式不正确，您可以使用电脑将U盘进行格式化，格式为 ‘FAT32’；

c. U盘本身的问题，建议您换一个U盘使用；
2. **蓝牙无法连接：**

a. 查看蓝牙是否能正常开启（蓝牙开启时指示灯会闪烁，并伴随有提示音）；

b. 若蓝牙的指示灯闪烁之后很快又常亮，则可能是蓝牙已被其他设备连接了；

c. 可能是手机的问题，建议您换一台手机尝试连接；
3. **音箱噪声大：**

a. 尝试把所有外接设备拔出，包括各种乐器设备及U盘；

b. 检查是否为音箱周围其他设备的电磁干扰所导致；
4. **音箱无法发出声音：**

a. 请先检查对应通道的增益旋钮（GAIN）以及总音量旋钮（MAIN VOLUME）是否已打开；

b. 尝试去更换到别的乐器通道，看是否为某个音频通道故障所导致；

c. 检查所接入的音源设备是否有正常工作(麦克风、吉他、电子鼓、电子琴、手机等)；
5. **音箱开不了机：**

a. 可能是音箱电量已耗尽，建议先给音箱充电一段时间后再尝试去开启音箱电源；

b. 使用电源线来连接充电接口与家庭插座，若充电指示灯不亮则表示当前无法正常充电；可能的原因是家庭插座的电压与音箱的充电电压不匹配，亦或是电源开关没有拨到充电档位；

 
* 若经过上述故障排除之后问题依然没有解决，则请联系客服或代理商或本公司;

规格参数

型号： DK 400；	频响范围： 40 - 18 KHz +0/-3dB；
输出功率： 400 W；	效果器： 合唱、延时、混响；
输入阻抗： Line in：10 KΩ； Acoustic：470 KΩ； E. Guitar：470 KΩ； Bass：470 KΩ； E. Drum：100 KΩ； Microphone 1/2：3 KΩ；	控件： Gain(音量增益旋钮);LOW/MID/HIGH(均衡调制旋钮);REVERB(混响效果);TONE(音色旋钮);EFX(效果器旋钮);CHORUS(合唱效果);DELAY(延时效果);Master Vol/Line IN/Record/Phones(音量旋钮);POWER(电源开关);
扬声器： 低音：12 寸低音喇叭；中音：6.5 寸中音喇叭； 高音：1 寸高音号角；	接口： LINK IN/OUT(音频输入/输出接口);Line in、Acoustic、E. Guitar、Bass、E. Drum(乐器输入接口);Mic 1/2(麦克风接口);Record(手机接口);Phones(耳机接口);USB(U盘接口);POWER(充电接口);DC-OUT(电源输出接口);
充电/放电 时间： 充电：4-5 小时； 放电：3-8 小时；	指示灯： 蓝牙指示灯、电源指示灯、充电指示灯、电源输出指示灯；
供电方式： * 110V/220V（边充电边使用）； * 内置锂电池组供电；	电源输出： 提供一个9V/1A的电源输出，可用于给效果器、电鼓音源等外部设备供电；
适配乐器： 话筒、电子鼓、贝斯吉他、电吉他、原声吉他、电子琴、萨克斯、调音台等设备；	

- 27)蓝牙/U盘 指示灯：
指示灯闪烁表示蓝牙开启后处于待连接状态；指示灯常亮表示蓝牙已连接或音箱已插入U盘；
- 28)耳机音量旋钮：
该旋钮用于调节音箱输出到耳机的音量；
- 29)耳机接口：
该接口插入耳机后可使用耳机来监听音箱；

功能说明

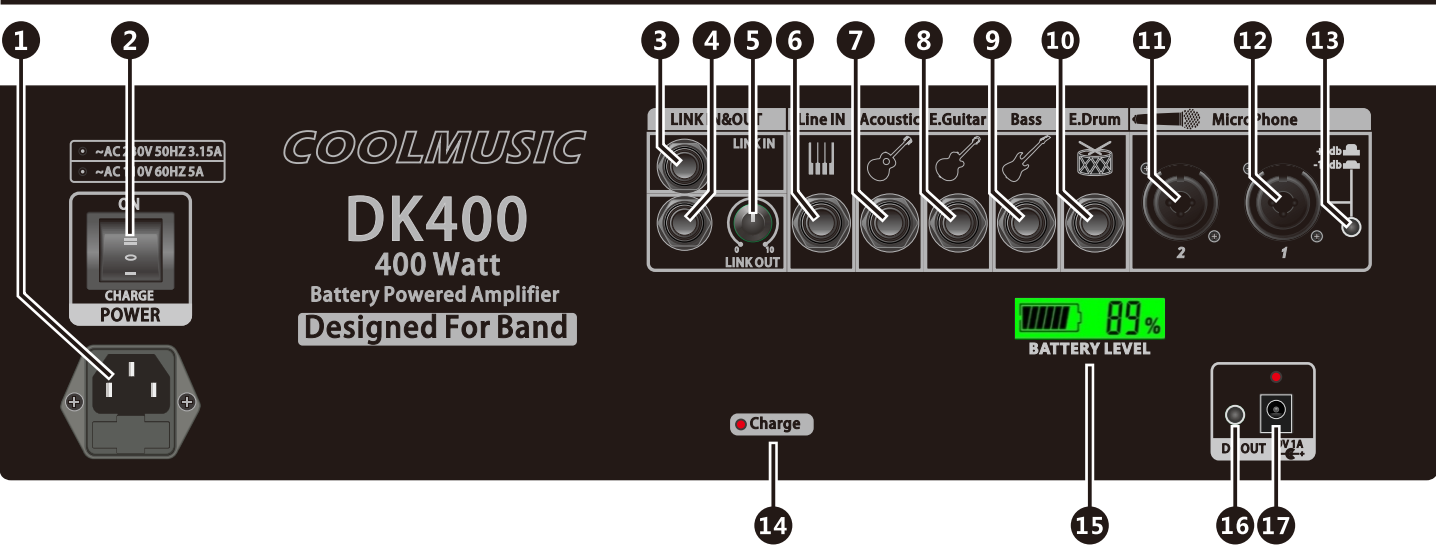

- 电源相关
- 1)电源插座：
音箱充电接口，通过电源线连接该接口与家庭电源插座来给音箱充电（操作之前请先留意家庭插座电压与音箱充电电压是否相符）；
- 2)电源开关：
* 向上拨动开机时，此时机器由外部电源供电，充电时长会增加一倍;
* 向下拨动是充电模式，该模式下充电较快，将音箱充满电只需 4-5 小时；
* 拨动到中间则是关机，此时充不进电；
- 音频输入/输出
- 3)音频输入接口：
该输入接口不受任何音量旋钮控制，用来连接其他音箱的音频输出；
- 4)音频输出接口：
将该音箱的音频信号输出到外部设备后可实现多设备音频同步播放的功能；
- 5)音频输出旋钮：
该旋钮用于调节音箱输出给外部设备的音频音量；
- 乐器输入接口
- 6)乐器输入接口：
该接口通过音频线连接 '电子琴' 等音频设备后来为音箱提供音频输入；
- 7)原声吉他接口：
该接口通过音频线连接 '原声吉他' 等音频设备后来为音箱提供音频输入；
- 8)电吉他接口：
该接口通过音频线连接 '电吉他' 等音频设备后来为音箱提供音频输入；
- 9)贝斯吉他接口：

- 30)峰值指示灯：
当红灯闪烁时，表示声音已接近音箱的最大功率；如果红灯连续闪烁且较亮，则声音可能已过载或失真，此时需要适当调整音量。
- 31)总音量旋钮：
该旋钮用于调节音箱的输出音量；

- 麦克风接口
- 10)电子鼓接口：
该接口通过音频线连接 '电子鼓' 等音频设备后来为音箱提供音频输入；
- 11)麦克风 2 通道接口：
该接口用于连接麦克风等音频设备(兼容6.35mm 或卡农等音频线)；
- 12)麦克风 1 通道接口：
该接口用于连接麦克风等音频设备(兼容6.35mm 或卡农等音频线)；
- 13)麦克风增益按钮：
按下按钮后麦克风通道的音量将减小，此时麦克风接口可用于连接无线麦克风等输入音频较大的设备；

- 电源相关
- 14)充电指示灯：
指示灯亮红色表示当前处于充电状态；指示灯亮绿色表示电量已充满；
- 15)电量显示屏：
电源开启后，该显示屏将显示音箱的剩余电量，电量较低时请尽快给音箱充电；
- 16)电源输出按钮：
按下该按钮后旁边的指示灯将亮起，此时电源输出接口将会输出 9V-1A 的电流；(当电源输出负荷过大时，该指示灯将熄灭；)
- 17)电源输出接口：
该接口可输出 9V-1A 的电流来为效果器、电鼓音源等设备提供电源；(该接口的电源极性为内正外负，使用前请先留意极性是否适配您的设备；)

 
MAINTENANCE

- For daily maintenance, please gently wipe the device with a soft or slightly damp dry cloth. To remove stubborn stains, apply a non-abrasive cleaner to a dry cloth before wiping the device with the dry cloth.
- Do not use benzene, thinner, alcohol or other solvents to clean the device to avoid damage or discoloration of the device.
- Every once in a while, you must unplug the adapter or power cord, and wipe the dust accumulated on the plug with a dry cloth. When the device is not in use for a long time, please also unplug the power plug from the socket. Dust deposited between the power plug and the power outlet may cause a short circuit and cause a fire.
- Before wiping the device, turn off the power and unplug the adapter or power cord from the outlet.
- When the equipment is damaged, please do not repair it yourself! Disassembling device may expose your body to dangerous voltages or other dangerous situations. If you need to repair, please find qualified maintenance personnel; Or return the equipment to the Company for repair by the company's maintenance personnel;


PRODUCT CHARACTERISTICS

The DK 400 is a portable multi-function instrument ampfilier. Specially developed for the rehearsal and performance of the band, only one ampfilier can meet the performance needs of most bands, its product features are as follows:

- * **Multi-instrument interface:**
The ampfilier is equipped with microphone, electronic drum, bass guitar, electric guitar, acoustic guitar, electronic organ and other instrument interfaces;
- * **Built-in battery:**
Built-in large capacity power lithium battery pack, the ampfilier fully charged, can be used continuously for 3-8 hours;
- * **Intelligent protection circuit:**
The ampfilier is also equipped with charging protection and overdischarge protection chip, so as to avoid equipment damage caused by human error;
- * **Power output:**
Provide a 9V-1A power output outlet, which can be used to power external devices such as effects, drum sound sources, etc.
- * **Digital power display:**
There is also a digital power display on the back of the ampfilier, which allows you to accurately grasp the remaining power of the ampfilier;
- * **Portable :**
The bottom of the ampfilier is equipped with four universal wheels, which can reduce the burden of carrying equipment during outdoor performances;
- * **EQ Balanced modulation:**
With 'low, medium and high' audio adjustment knobs, thus enriching your tuning needs in timbre;
- * **Multi-function effect:**
Built-in 'chorus, delay, reverberation' and other effects, and each effect can be adjusted independently;
- * **Mobile live recording:**
After connecting the phone port on the ampfilier through the mobile phone, you can use the mobile phone to broadcast or record;
- * **Earphone monitoring:**
This function allows you to use headphones to monitor the audio signal of the ampfilier while playing;
- * **Bluetooth/USB flash Drive:**
This function can solve the problem of many ampfiliers on the market because there is no Bluetooth /U disk function;

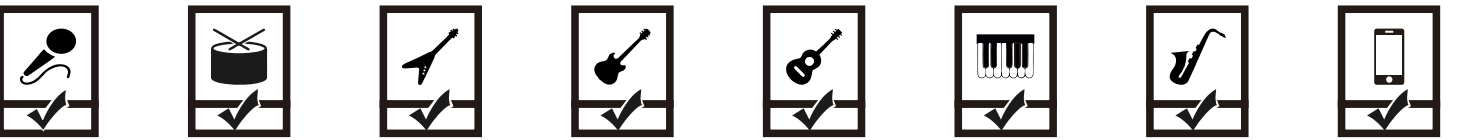

FUNCTION DESCRIPTION

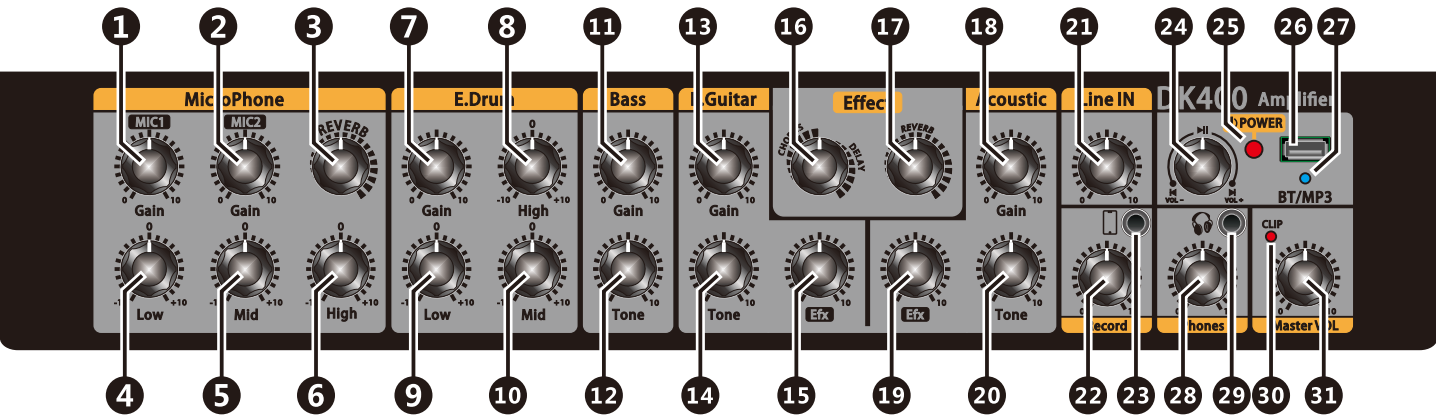 

Microphone channel

1) Mic 1 Gain :
The knob is used to adjust the volume of microphone 1;

2) Mic 2 Gain :
The knob is used to adjust the volume of microphone 2 ;

3) Reverb :
The knob is used to adjust the reverb effect intensity of microphone channel;

4) Low :
The knob is used to adjust the low-frequency signal gain of microphone channel;

5) Mid :
The knob is used to adjust the mid-frequency signal gain of microphone channel;

6) High :
The knob is used to adjust the high frequency signal gain of microphone channel;

Electronic drum channel

7) Gain:
The knob is used to adjust the volume of the electronic drum channel.

8) High:
The knob is used to adjust the high frequency signal gain of electronic drum channel.

9) Low:
The knob is used to adjust the low-frequency signal gain of electronic drum channel.

10) Mid:
The knob is used to adjust the mid-frequency signal gain of electronic drum channel.

Bass guitar channel

11) Gain:
The knob is used to adjust the volume of bass guitar channel;

12) Tone:
The knob is used to adjust tone of bass guitar channel;

Electric guitar channel

13) Gain:
The knob is used to adjust the volume of the electric guitar channel;

14) Tone:
The knob is used to adjust the tone of the electric guitar channel;

15) Efx:
This knob is used to adjust the effect gain of the electric guitar channel (including chorus/delay/reverb);

Electric guitar and acoustic guitars

16) Chorus/Delay:
The knob is used to adjust the effect intensity of the electric guitar and the acoustic guitar, the left side is chorus effect, the right side is delay effect;

17) Reverb:
The knob is used to adjust the reverb intensity of electric guitar channel and acoustic guitar channel;

Acoustic guitar channel

18) Gain:
This knob is used to adjust the volume of acoustic guitar channel;

19) Efx:
This knob is used to adjust the effect gain of acoustic guitar channel (including chorus/delay/reverb);

20) Tone:
The knob is used to adjust the tone of the acoustic guitar channel;

21)Line IN:
The knob is used to adjust the volume of the electronic organ and other Musical Instruments;

Mobile phone recording live

22)Record:
The interface is used to adjust the volume of music recorded in the ampfilier to the mobile phone;

23)Phone:
The interface through '4-3.5mm audio cable' connected to the mobile phone can not only use ampfilier to play songs on mobile phone, but also can achieve 'mobile phone live', 'mobile phone recording';

Bluetooth /USB

 
24) Bluetooth /USB multi-function knob:

- a. Long press knob to control Bluetooth on or off;
- b. Click knob to control music play or pause;
- c. Turn knob to the right: switch to the next song;
- d. Turn knob to the right and do not let go: increase the volume;
- e. Turn knob to the left: switch to the previous song;
- f. Turn knob to the left and do not let go: reduce the volume;

25) Power indicator:
The indicator is green when the battery is powered on, and yellow when the AC power is connected.

26)USB:
After inserting USB flash drive, ampfilier will turn off Bluetooth and play songs on USB flash drive;

功能说明

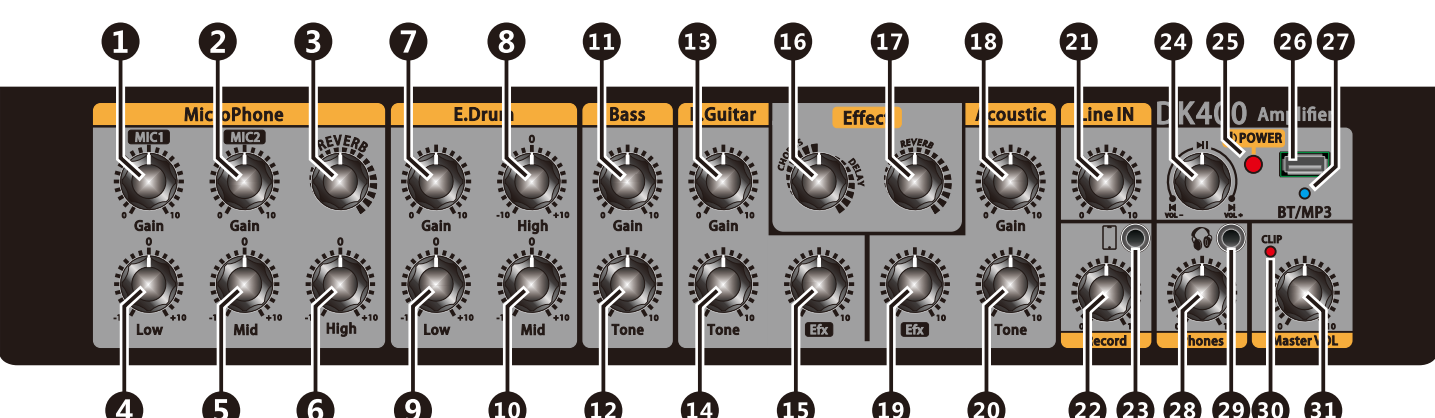

麦克风通道

1)麦克风1音量旋钮：
该旋钮用于调节 麦克风1通道 的音量；

2)麦克风2音量旋钮：
该旋钮用于调节 麦克风2通道 的音量；

3)混响旋钮：
该旋钮用于调节 麦克风1/2通道 的混响效果强度；

4)低音旋钮：
该旋钮用于调节 麦克风1/2通道 的低频信号增益；

5)中音旋钮：
该旋钮用于调节 麦克风1/2通道 的中频信号增益；

6)高音旋钮：
该旋钮用于调节 麦克风1/2通道 的高频信号增益；

电子鼓通道

7)电子鼓音量旋钮：
该旋钮用于调节 电子鼓通道 的音量；

8)高音旋钮：
该旋钮用于调节 电子鼓通道 的高频信号增益；

9)低音旋钮：
该旋钮用于调节 电子鼓通道 的低频信号增益；

10)中音旋钮：
该旋钮用于调节 电子鼓通道 的中频信号增益；

贝斯吉他通道

11)贝斯音量旋钮：
该旋钮用于调节 贝斯吉他通道 的音量；

12)音色旋钮：
该旋钮用于调节 贝斯吉他通道 输入音频的音色；

电吉他通道

13)电吉他音量旋钮：
该旋钮用于调节 电吉他通道 的音量；

14)音色旋钮：
该旋钮用于调节 电吉他通道 输入音频的音色；

15)效果增益旋钮：
该旋钮用于调节 电吉他通道 的效果器增益（包含 合唱/延时/混响 等效果）；

电吉他和原声吉他

16)合唱/延时 旋钮：
该旋钮用于调节 电吉他通道和原声吉他通道 的效果器强度，左边为合唱效果，右边为延时效果；

17)混响旋钮：
该旋钮用于调节 电吉他通道和原声吉他通道 的混响效果器强度；

原声吉他通道

18)原声吉他音量旋钮：
该旋钮用于调节 原声吉他通道 的音量；

19)效果增益旋钮：
该旋钮用于调节 原声吉他通道 的效果器增益（包含 合唱/延时/混响 等效果）；

20)音色旋钮：
该旋钮用于调节 原声吉他通道 输入音频的音色；

21)乐器输入音量旋钮：
该旋钮用于调节电子琴等乐器输入的音量；

手机内录直播

22)内录音量旋钮：
该接口用于调节音箱音频信号内录到手机的音量；

23)手机内录接口：
该接口通过 '4节-3.5mm音频线' 连接手机后既可以用音箱播放手机上的歌曲，也可以实现 '手机直播'、'手机录音' 等功能；

蓝牙/U盘

24)蓝牙/U盘 多功能旋钮：

- a. 长按该旋钮：控制蓝牙的开启或关闭；
- b. 单击该旋钮：控制音乐的播放或暂停；
- c. 旋钮往右扭一下：切换到下一首歌曲；
- d. 旋钮往右扭然后不松手：增大音量；
- e. 旋钮往左扭一下：切换到上一首歌曲；
- f. 旋钮往左扭然后不松手：降低音量；

25)电源指示灯：
电池供电时指示灯亮绿色，接入交流电源后指示灯亮黄色；

26)U盘接口：
插入U盘后音箱将关闭蓝牙并播放U盘中的歌曲；

维护保养

- 1.日常保养请用柔软或微湿的干布轻轻擦拭本设备。若要去除顽垢污渍，请先在干布上涂抹非腐蚀性的清洁剂，然后再使用干布擦拭本设备。
- 2.请勿使用苯、稀释剂、酒精或者其他溶剂去清洁本设备，以免造成设备损毁或变色。
- 3.每隔一段时间，您必须将适配器或电源线的插头拔掉，并用干布擦拭累积于插头上面的灰尘。长期不使用本设备时，也请将电源插头拔离插座。在电源插头与电源插座之间沉积的灰尘可能会引发线路短路进而导致火灾。
- 4.擦拭设备之前，请关闭电源并将适配器或电源线的插头拔出插座。
- 5.当设备损坏时请不要自行维修！拆开该设备可能使您的身体暴露于危险电压或其他危险情况之下。如需维修请找有资质的维修人员；或者将设备发回本公司，由本公司的维修人员进行维修；

产品特性

DK 400 是一款便携式的多功能乐器音箱。专为乐队的排练演奏而研发，仅一台音箱就能满足大部分乐队的演奏需求，其产品特性有如下：

*** 多乐器输入接口：**
该音箱设有麦克风、电子鼓、贝斯吉他、电吉他、原声吉他、电子琴等乐器接口；

*** 内置电池：**
内置大容量的动力锂电池组，将音箱充满电以后，可连续使用 3-8 小时；

*** 智能化保护电路：**
音箱内部还搭载了充电保护和过放保护芯片，从而能避免因人为失误而导致的设备损坏；

*** 电源输出：**
提供一个 9V-1A 的电源输出口，可用于给效果器、电鼓音源等外部设备供电；

*** 数字化电量显示屏：**
在音箱的背部还配置了一个数字化电量显示屏，能让您准确地掌握音箱的剩余电量状况；

*** 便携式、易搬运：**
音箱的底部装有四个万向轮，从而能减轻你在户外演出时搬运设备的负担；



 
其它注意事项

- 1.请小心使用本设备的按键、旋钮、接口以及各类连接器。用力过度可能会造成设备故障或损坏。
- 2.当插入或是拔出各种连接线时，请用手握住连接线的插头部分，切勿拉扯连接线。以免连接线短路，进而损害本设备。
- 3.为了避免干扰到邻居，请将音量旋钮调整适当的档位。
- 4.搬动设备之前，请关闭电源并将适配器或电源线的插头拔出插座。
- 5.要运送本设备时，尽可能使用原本包装的箱子。亦或是使用类似的包装材料。
- 6.有些连接线含有电阻。不要使用此类连接线进行设备的连接。这类连接线可能会导致音量过小。关于连接线的技术指标，请咨询制造商或销售方。

27) Bluetooth /USB indicator:
If the indicator blinks, the Bluetooth is in the waiting state after being enabled. If the indicator is steady on, the Bluetooth is connected.

28) Volume:
This knob is used to adjust the volume of the phones;
29)Phones:
After the interface is inserted into the headset, the headset can be used to monitor the ampfilier;

FUNCTION DESCRIPTION

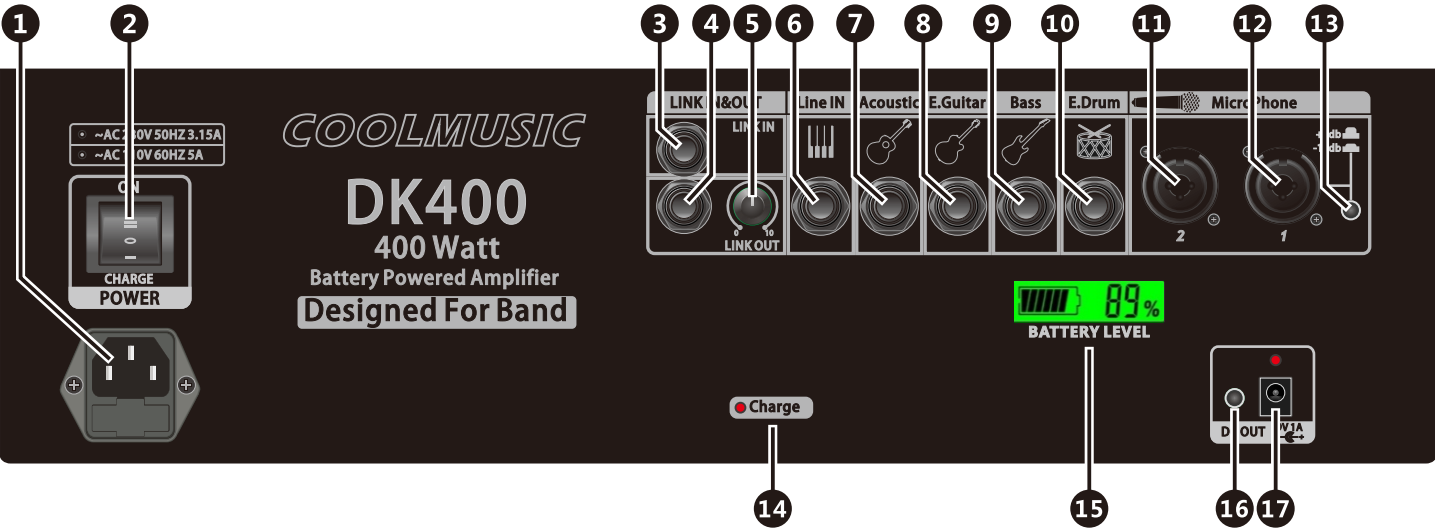

Power In

1) Power socket:
When charging, use the power cord to connect this port to the home power outlet;
2) Power switch:
* When the machine is powered by an external power supply, the charging time will be doubled;
* Downward push is the charging mode, the charging mode is faster, 4-5 hours can be full;
* Dial to the middle is off, this time can not be charged;

Link in/out

3)Link in:
The interface is not controlled by any knob and is used to connect the audio output of other ampfiliers;
4)Link out:
The interface can output the audio signal to the external device to realize the function of simultaneous playback by multiple devices.
5)Volume:
This knob is used to adjust the volume of audio output to external devices;

Instrument interface

6)Line IN:
The interface is connected to the 'electronic organ' via an audio cable to provide audio input to the ampfilier;
7)Acoustic:
This interface connects an 'acoustic guitar' via an audio cable to provide audio input to the ampfilier;
8)E.Guitar:
This interface connects the 'electric guitar' via an audio cable to provide audio input to the ampfilier;
9)Bass :
This interface connects the 'bass guitar' via an audio cable to provide audio input to the ampfilier;
10) E.Drum:
The interface is connected to an 'electronic drum' via an audio cable to provide audio input to the ampfilier;

30)CLIP:
Blinking red indicates that the sound is approaching the maximum power. If the red light is on, the sound may be overloaded or distorted, and the volume needs to be adjusted appropriately.
31)Master VOL:
The knob is used to adjust the volume of the ampfilier;

Microphone

11)Microphone 2:
The interface is used to connect audio devices such as microphones (compatible with audio cables such as 6.35mm or Canon);
12)Microphone 1:
The interface is used to connect audio devices such as microphones (compatible with audio cables such as 6.35mm or Canon);
13)Gain:
After pressing the button, the volume of the microphone channel will be reduced, and the microphone interface can be used to connect devices with large input audio, such as wireless microphones;

Power

14) Charging indicator:
If the indicator is red, it indicates that it is currently in the charging state. If the indicator is green, the battery is fully charged.
15) Power display:
After the power is turned on, the display will show the remaining power of the ampfilier. If the power is low, please charge the ampfilier as soon as possible.
16) Power output button:
After you press this button, the indicator next to it will light up, and the power output port will output 9V-1A current. (When the power output load is too large, the indicator will be turned off;)
17) DC-OUT:
The interface can output 9V-1A current to provide power for the effect device, drum sound source and other equipment;

TROUBLESHOOTING

1.U disk can not play music:

- a. The capacity of the U disk is too large, it is recommended that you use a U disk with a capacity below 32G;
- b. The format of the USB flash drive is incorrect, you can use the computer to format the USB flash drive, the format is ' FAT32';
- c. The problem of U disk itself, it is recommended that you change a U disk to use;

2. Bluetooth connection failure:

- a. Check whether the Bluetooth can be turned on normally ;
- b. If the Bluetooth indicator blinks and turns on soon after, it may be that the Bluetooth has been connected by another device;
- c. It may be the problem of the mobile phone, we suggest that you change the mobile phone to try to connect;

3. Loud ampfilier noise:

- a. Try to pull out all external devices, including various Musical Instruments and U disks;
- b. Check whether it is caused by electromagnetic interference from other devices around the ampfilier;

4. The ampfilier cannot make a sound:

- a. Check whether the GAIN knob and MAIN VOLUME knob of the corresponding channel are enabled.
- b. Try to change to another instrument channel to see if it is caused by a fault in an audio channel;
- c. Check whether the connected audio source equipment works normally ;

5. The ampfilier can't open:

- a. It may be that the ampfilier power has been exhausted, it is recommended to charge the ampfilier for a period of time before trying to turn on the ampfilier power;
- b. Use the power cord to connect the charging interface to the home socket. If the charging indicator is not on, it means that the current charging cannot be normal;

*** If the problem is still not resolved, please contact customer service or agent or our company;**

SPECIFICATIONS

Model : DK 400 ;	Frequency response : 40 - 18 Khz +0/-3dB ;
Power : 400 W ;	Effects: Chorus, delay, reverb ;
Input impedance : Line in : 10 KΩ ; Acoustic : 470 KΩ ; E . Guitar : 470 KΩ ; Bass : 470 KΩ ; E . Drum : 100 KΩ ; Microphone 1/2 : 3 KΩ ;	Control: Gain(volume knob); LOW/MID/HIGH(equalizing modulation knob); REVERB, CHORUS, DELAY (effect type); TONE(tone knob); EFX(effect knob); Master Vol/Line IN/Record/Phones(volume knob); POWER(power switch);
Speaker : 12 inch woofer ; 6.5 inch midrange ; 1 inch tweeter ;	Interface: LINK IN/OUT(audio interface); Line in, Acoustic, E. Guitar, Bass, E. Drum(instrument interface); Mic 1/2(microphone interface); Record(mobile phone interface); Phones(headphone interface); USB(U disk interface); POWER(charging interface); DC-OUT(power output interface);
Charge/discharge : Charge : 4-5 hours; Discharge : 3-8 hours;	Indicator light: Bluetooth indicator, power indicator, charging indicator, power output indicator;
Power supply mode : * 110V / 220V (use while charging); * Built-in lithium battery power supply;	Power output: Provide a 9V/1A power , which can be used to power external devices such as effects and drum sound sources;
Instrument : Microphone, electronic drum, Bass guitar, electric guitar, acoustic guitar, electronic organ;	

警告：当使用该产品时，请遵循以下基本注意事项：

- 1 . 请认真阅读产品使用说明书。

2 . 留意说明书里所提到的警告事项。

3 . 留意说明书里所提到的注意事项。

4 . 使用本产品时请按照说明书的指示来操作。

5 . 不要在靠近水的地方使用本产品。

6 . 对本产品进行清洁时请使用干布。

7 . 请勿阻塞或影响本机正常通风，请遵循原厂指示进行安装。

8 . 本产品应要远离热源，像是电暖炉、暖气以及其它会发热的设备。
- 9 . 请小心维护好电源线，切勿过度踩踏或缠绕电源线，以免导致电源线损坏。

10 . 仅可使用原厂的附件或指定的选购品。

11 . 当发生雷击或长期不使用该产品时，请您关闭电源开关，并将电源插头拔离插座。

12 . 关于维修服务请咨询授权的线下代理点或者线上销售客服。当本产品有损坏，如电源线或插头损坏、液体倾入或物品倒塌于本设备上，或经曝晒、雨淋、摔坏等状况时，请联系授权的线下代理点或者线上销售客服。

安全 注 意 事 项

⚠ 警告事项

这些指示用于提醒使用者，本产品的不当使用可能对您造成人身危险。

⚠ 注意事项

这些指示用于提醒使用者，本产品的不当使用可能会导致设备的损坏。

..... 请 始 终 遵 循 以 下 指 示

⚠ 警告事项

使用设备

- 请您不要自行拆开本设备，亦或是自己尝试更换本设备的内置部件。
- 手部潮湿时，请勿拿取本设备的电源线，同时也不可以将适配器或电源线的插头插入或拔离电源插座。
- 将适配器或电源线的插头插入或拔开插座时，请用手握住电源线的插头部分。
- 请按照本说明书的指示去连接电源供电设备以及外围的输入设备。
- 请避免电源线互相缠绕，也不要将重物压置在电源线上方。否则将会损坏电源线进而导致短路，产生危险。
- 请勿将任何物品(如易燃物、硬币、别针等)或任何液体(水、饮料等) 掉入本产品内部。
- 当发生以下情况时，请立即关闭电源，将插头拔掉：
 - 适配器或者电源线的插头破损；
 - 设备冒烟或产生异味；
 - 异物或液体掉入本设备内部；
 - 本设备直接遭雨淋或打湿；
 - 本设备的其他异样反应；
- 请勿将盛有水的容器（如花瓶）或饮料放置于设备上。盛有杀虫剂、香水、酒精、指甲油或喷雾剂的容器也不要放置在上。液体侵蚀设备会造成设备故障或短路。
- 请勿踩踏设备，也不要将重物放置在上。

电力供应

- 请勿让本设备与其它容易产生杂音的设备或含有马达的设备共用一个电源插座（例如冰箱、冷气机、微波炉或空调）。否则可能会导致不同设备之间相互干扰，进而导致本设备故障或有杂音。建议您最好单独使用分开的插座。
- 设备在长时间连续使用后会 出现轻微发热，属于正常现象，无须担心。

- 当设备的电源被关闭时，指示灯将熄灭。当您不使用本设备时，请先将电源关闭，然后再将插头拔离插座。
- 请勿将过多的电器与本设备共用一个插座。在使用延长线时，请特别注意您连接在延长线上的所有设备，其总功率绝对不可以超过延长线所能承受的功率。电流的超载会导致导线发热进而导致电线短路。

⚠ 注意事项

放置场所

- 若本设备周边放有大功率电器则可能会干扰本设备进而使设备产生杂音。为了避免此现象，可以调整放置的位置，或移开干扰源。
- 本设备可能会受到收音机或电视机的信号干扰。使用本设备时请勿邻近这些信号接收装置。
- 手机等无线通讯设备在接听或拨打电话时，可能会对本设备产生干扰。当发生此现象时，请将无线通讯设备与本设备的距离拉远。
- 请勿将本设备曝晒在日光直射处，或是放置于高热或通风不良等极端的环境下。过热可能会导致本设备变形或损坏。
- 当您将本设备移至温度与湿度差异较大地方时，本设备内部可能会产生水气。若您在此状况下使用本设备，则可能会导致设备故障。
- 请勿将本设备放置在以下场所：
 - 温度过高的场所(例如阳光直射下的封闭车辆中、热输送管附近或发热机器的上方)；
 - 潮湿处(例如：浴室、洗手间或潮湿的地面)；
 - 湿气重的地方；
 - 直接遭雨淋的地方；
 - 灰尘多的地方；
 - 有强烈震动的地方；
- 请确保将本设备放置于平坦之处以确保其稳固。请勿将本设备放置于可能会摇晃的支架上或是斜面处。
- 请将本设备、适配器或电源线放置在不影响其通风的场所或方向。