




COOLMUSIC

ES-1

30W Portable electric blower speaker

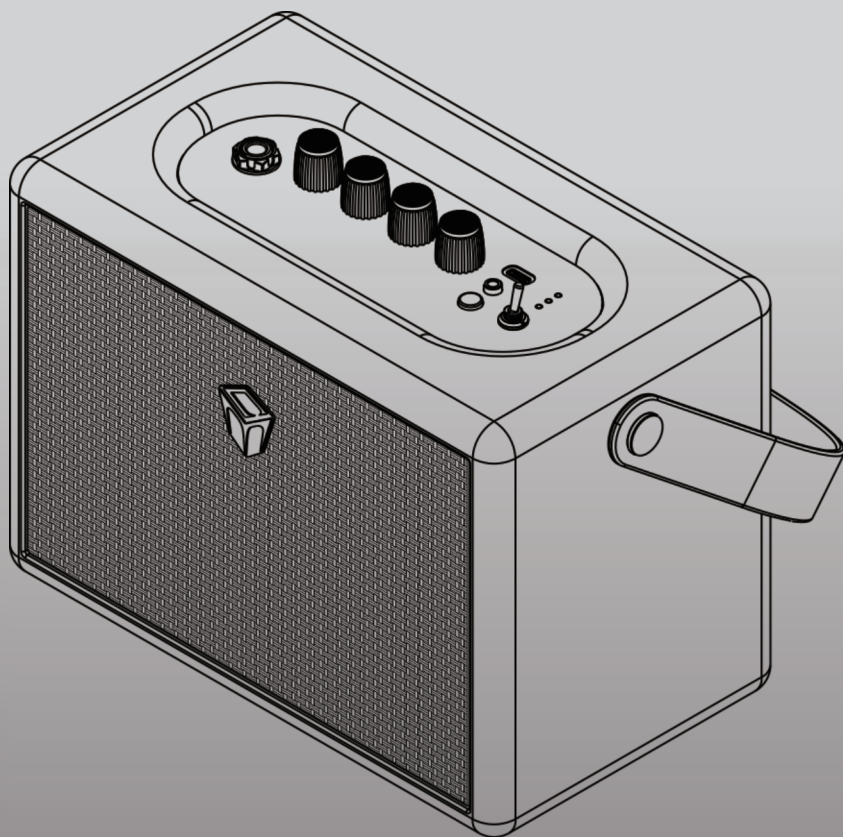

User manual
COOLMUSIC(SHENZHEN)TECH CO.,LTD



★ Thank you for choosing ES-1 multifunctional guitar amplifier. Before using this product, please read the manual first to understand the product's functions, usage skills and precautions, so that you can better use the device.

PRECAUTIONS



WARNING

Remind users that improper use may be dangerous to you.



CAUTION

Remind users that improper use may cause equipment damage.

WARNING



Do not disassemble or modify the built-in parts of the device by yourself



Do not place in the following places:



*Places with too high temperature;

*Places with heavy humidity;

*Places directly exposed to rain;

*Dusty places;

*Places with strong vibrations



Please make sure to place the device on a flat place to ensure it is stable.



When the following situations occur, turn off the power immediately and unplug the plug.

*The adapter or power cord is damaged;

*The device emits smoke;

*The liquid falls into the equipment;

*The equipment is exposed to rain;

*Abnormal response to equipment operation;



Children must be accompanied by their parents to use this device.



Do not place containers or beverages containing water on the equipment.

Do not place containers containing insecticides, perfumes, alcohol, nail polish or sprays on the equipment.



Please follow the "interface instructions" in the manual to connect the adapter and other musical instruments.



Please avoid intertwining the power cords, and do not place heavy objects on the power cords.



Do not drop any objects or any liquids (water, drinks, etc.) into the inside of the device



Do not share too many electrical appliances with this product. When using an extension cord, please pay attention to all the devices on the extension cord. The total power of the extension cord cannot exceed the power it can withstand.

CAUTION



Please avoid entanglement of the power cord and wire. Also keep children away from the power cord.



Do not step on the equipment or place heavy objects on the equipment.



Do not take the power cord or adapter when your hands are wet.



Do not operate the device when your hands are wet.



Pull out the power plug from the socket before wiping the device.



It is recommended to power off the device during thunderstorms.




Please unplug the adapter from the socket before moving the device.




Do not replace the horn by yourself. Disassembling the horn by yourself will cause electric shock.

DESCRIPTION

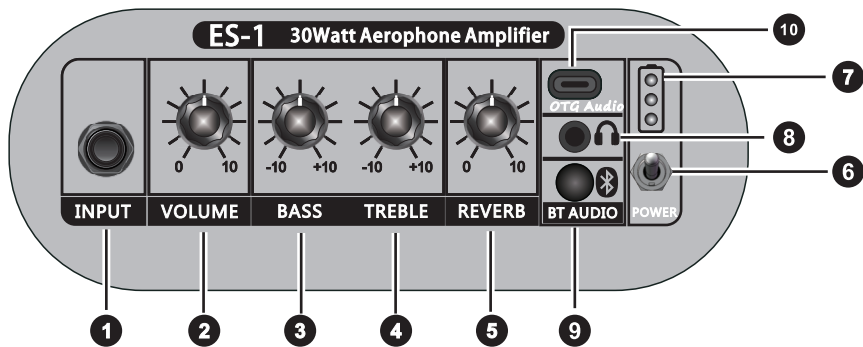

1	INPUT	This interface is used to connect instruments such as electric trumpets and electronic keyboards.
2	VOLUME	Used to control the volume of the overall music playback.
3	BASS	Used to adjust the level of bass in music, either to increase or decrease it.
4	TREBLE	Used to adjust the increase or decrease of high frequencies in music.
5	REVERB	This feature is used to adjust the intensity of the reverb effect. It only affects instrument inputs.
6	POWER	Pull up to turn on the machine' s power, pull down to turn off the machine' s power.
7	INDICATOR LIGHT	The battery level is displayed. When only the bottom light is illuminated and it is red, it indicates that the battery is low. Please charge it as soon as possible.
8	PHONES	This is used to connect headphones. When a headphone is inserted, the speaker is muted and silent.
9	BT/AUDIO	Long-press the switch to turn Bluetooth on or off, and a notification sound will play. After turning Bluetooth on, the power button will light up with a blue light. You can use your phone to connect the speaker and play music. The Bluetooth name of the speaker is: CoolMusic.
10	OTG	Long-press the switch to turn Bluetooth on or off, and a notification sound will play. After turning Bluetooth on, the power button will light up with a blue light. You can use your phone to connect the speaker and play music. The Bluetooth name of the speaker is: CoolMusic.

DESCRIPTION

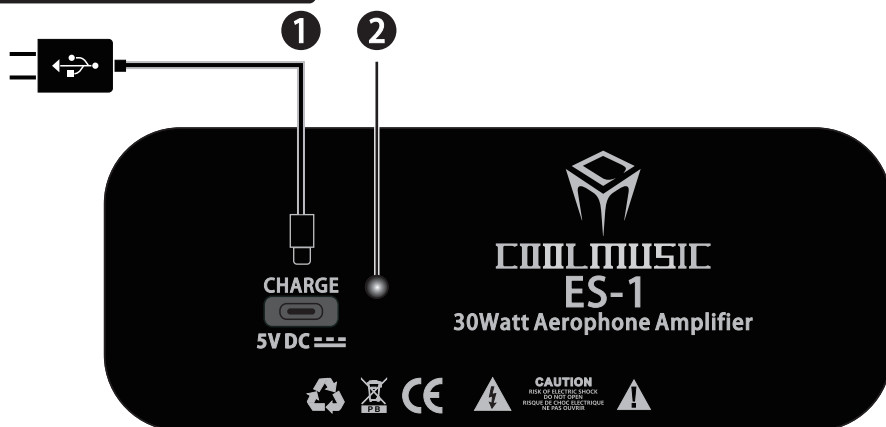

1 Charging indicator:

When the adapter is connected to the speaker, a red light indicates that charging is in progress, while a green light indicates that the battery is fully charged.

2 Charging port:

When charging the speaker, please use a power source with the 'USB-5V' designation, such as a phone adapter, a computer's USB port, or a DC power supply. When charging, the power supply equipment and the musical instrument equipment can interfere with each other, resulting in noise. Therefore, it is recommended that you not use this device while it is charging.

SPECIFICATIONS

Model	ES-1
Rated Power	THD=10%:30Watt
Speaker	Low: 5.25 inches, 30W, 4 ohms; High: 0.75 inches, silk diaphragm
Charge	DC:5V-2A
Charging time	3-4 hours
Discharge	4-12 hours
Battery pack	7.4v2600ma/H
Size	232*166*135mm
Weight	2.8kg
Interface	USB charging , user manual, carrying strap.