

 
UNIQUE SE

COOLMUSIC

ACTIVE GUITAR AMP BATTERY POWERED

AMPLIFIER MANUAL

Please Read The Manual

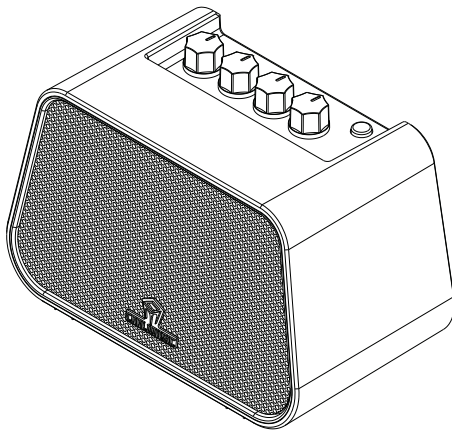

MADE IN CHINA

酷乐科技(深圳)有限公司
COOLMUSIC(SHENZHEN) TECH CO.,LTD

Warning: Follow these basic precautions:

PRECAUTIONS FOR USE

1. Please do not disassemble the device by yourself, or try to replace the built-in parts of the device.
2. When your hands are wet, do not take the power cord of the device, and also do not insert or unplug the adapter or the plug of the power cord from the power outlet.
3. When inserting or unplugging the plug of the adapter or power cord, hold the plug part of the power cord with your hand.
4. Please follow the instructions in the manual to connect the power supply and peripheral input devices.
5. Please avoid the power cords entangled with each other, and do not place heavy objects on top of the power cords. Otherwise, the power cord will be damaged, resulting in a short circuit, which is dangerous.
6. Do not drop any object or any liquid into the inside of this product.
7. When the following situations occur, please turn off the power immediately and pull out the plug:
 - a. The plug of the adapter or power cord is damaged;
 - b. The equipment emits smoke or produces peculiar smell;
 - c. Foreign objects or liquids fall into the inside of device;
 - d. The equipment is directly exposed to rain or wet;
 - e. Other abnormal reactions of the device;

POWER SUPPLY PRECAUTIONS

 
1. Do not let this device share a power socket with other devices that are prone to noise or devices that contain motors. Doing so may cause mutual interference between different devices, resulting in malfunction or noise of the device.

2. The device will have a slight fever after long-term continuous use, which is a normal phenomenon, so there is no need to worry.
3. When the power of the device is turned off, the indicator light will turn off. When you are not using this equipment, turn off the power before unplugging it from the outlet.
4. When using the extension cord, please pay special attention to all the devices you connect to the extension cord, and the total power must not exceed the power that the extension cord can withstand.

PLACEMENT PRECAUTIONS

1. If there are high-power electrical appliances around the device, it may interfere with the device and cause noise. To avoid this phenomenon, you can adjust the placement position, or remove the source of interference.
2. This device may be interfered with by radio or television signals. Do not use this equipment near these receivers.
3. Mobile phones and other wireless communication devices may interfere with this device when answering or making calls. When this happens, please keep the wireless communication device away from this device.
4. Do not expose the device to direct sunlight, or place it in extreme environments such as high heat or poor ventilation. Overheating may cause deformation or damage to device.
5. When you move the device to a place with a large difference in temperature and humidity, moisture may be generated inside the device. If you use the device in this condition, it may cause the device to malfunction.

FUNCTION DESCRIPTION

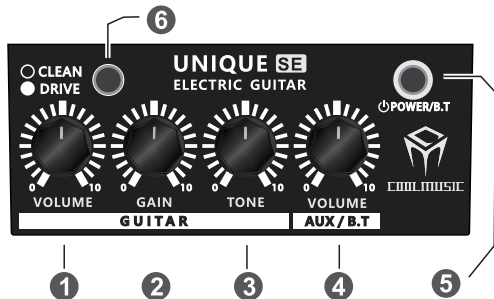

(1) Volume control knob:

This knob is primarily used to adjust the volume level of the input audio signal.

(2) Gain control knob:

This knob is used to adjust the gain of the input audio signal;

(3) Tone Control Knob:

This knob is used to adjust the tone characteristics of the input audio signal.

(4) Bluetooth volume control knob:

This knob is used to adjust the volume of the audio input from Bluetooth and the 'AUX' source;

(5) Bluetooth switch:

a. Long-press the switch for 2 seconds to turn the device on or off; when turned on, a green indicator light will be displayed

 
b. Click to enable Bluetooth, then double-tap to disconnect from the Bluetooth connection and enter pairing mode again

Note: After turning on Bluetooth, the indicator light will flash. Use the phone to search for devices with the Bluetooth name "UNIQUE-SE". Once connected to the Bluetooth, the indicator light will remain on continuously:

(6) Functional buttons:

After powering on, press the button to switch to the distorted sound mode, with a bright red indicator light.

FUNCTION DESCRIPTION

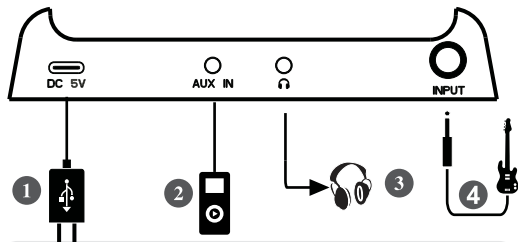

Charging port

When charging the speaker, please use a power supply device with the designation 'DC5V-2A', such as a mobile phone adapter or a DC power supply: (During charging, the power supply device and the musical instrument device may interfere with each other, leading to noise, so it is recommended not to use the device while it is charging).

AUX input interface:

 
This interface is designed for connecting audio devices such as "mobile phones and MP3 players";

Headphone output interface:

After inserting the headset, the speaker will automatically enter a silent mode, and the headset can then serve as a monitoring device for the speaker (Note: It is recommended to adjust the volume knob to a suitable level before inserting the headset);

Input interface:

This interface is primarily designed for connecting musical instrument devices such as electric guitars.

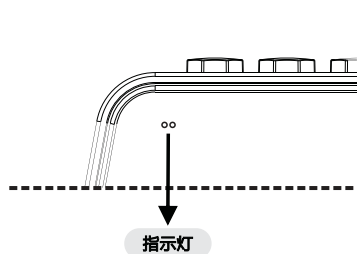

Indicator light:

- a: After connecting the speaker with the adapter, the indicator light will turn green and flash, indicating that it is charging. When fully charged, the light will turn off.
- b: Press and hold the power button for 3 seconds to turn the device on or off. After the device is powered on, click the button to enable Bluetooth. Double-click the power button when a Bluetooth device is connected to disconnect the current connection. The Bluetooth light will flash when Bluetooth is in search mode, and it will stay on continuously when a device is connected.

SPECIFICATIONS

Model :

UNIQUE - SE

Output Power :

10W;

Input Resistance :

INPUT :100KΩ;

Speaker :

1.8 inches * 2, 4-inch

Frequency Range :

22HZ-20KHz ;

Weight :

N.W: 670g; G.W: 750g;

Control :

VOLUME (volume gain knob); GAIN (gain knob);
B.T (Bluetooth function knob); POWER (power switch)
TONE (tone control); CLEAN/DRIVE (clean sound/distortion)

Interface:

AUX (audio input interface); INPUT (guitar input interface);
PHONES (Headphone Output Interface) DC-5V (Speaker
Charging Interface)

Interface:

Bluetooth indicator, battery indicator;

Appendix:

Power cord, manual, warranty card;

TROUBLESHOOTING

1. The amplifier cannot produce sound:

- a. It may be that the power of amplifier is too low, it is recommended that you charge the amplifier as soon as possible;
- b. The volume knob or gain knob of the amplifier is not turned on, you can try to turn up all knobs of the amplifier and try again;
- c. Check whether your guitar or mobile phone is in normal working condition. If external equipment is damaged, the amplifier may not work;

2. Bluetooth cannot connect:

- a. Check whether the Bluetooth can be turned on normally (light will flash when Bluetooth is turned on, and there will be a prompt tone);
- b. If the bluetooth indicator flashes and then turns on quickly, it may be that the bluetooth has been connected by other devices;
- c. It may be the problem of the mobile phone, it is recommended to use another mobile phone to try to connect the Bluetooth of the amplifier;

3. Loud amplifier noise:

- a. Try to unplug all external devices, including the charging cables of various musical instruments and amplifiers;
- b. Check whether the noise is caused by the mutual interference between the amplifier and other surrounding electrical equipment;

使用该产品时，请遵循以下基本注意事项

使用注意事项

- 1.请您不要自行拆开本设备，亦或是自己尝试更换本设备的内置部件。
- 2.手部潮湿时，请勿拿取本设备的电源线，同时也不可以将适配器或电源线的插头插入或拔离电源插座。
- 3.将适配器或电源线的插头插入或拔出插座时，请用手握住电源线的插头部分。
- 4.请按照本说明书的指示去连接电源供电设备以及外围的输入设备。
- 5.请避免电源线互相缠绕，也不要将重物压置在电源线上。否则将会损坏电源线进而导致短路，产生危险。
- 6.请勿将任何物品(如易燃物、硬币、别针等)或任何液体(水、饮料等)掉入本产品内部。
- 7.当发生以下情况时，请立即关闭电源，将插头拔掉：
 - a.适配器或者电源线的插头破损；
 - b.设备冒烟或产生异味；
 - c.异物或液体掉入本设备内部；
 - d.本设备直接遭雨淋或打湿；
 - e.本设备的其他异样反应；

供电注意事项

 
- 1.请勿让本设备与其它容易产生杂音的设备或含有马达的设备共用一个电源插座（例如冰箱、冷气机、微波炉或空调）。否则可能会导致不同设备之间相互干扰，进而导致本设

- 备故障或有杂音。建议您最好单独使用分开的插座。
- 2.设备在长时间连续使用后会轻微发热，属于正常现象，无须担心。
- 3.当设备的电源被关闭时，指示灯将熄灭。当您不使用本设备时，请先将电源关闭，然后再将插头拔离插座。
- 4.请勿将过多的电器与本设备共用一个插座。在使用延长线时，请特别注意您连接在延长线上的所有设备，其总功率绝对不可以超过延长线所能承受的功率。电流的超载会导致导线发热进而导致电线短路。

放置注意事项

- 1.若本设备周边放有大功率电器则可能会干扰本设备进而使设备产生杂音。为了避免此现象，可以调整放置的位置，或移开干扰源。
- 2.本设备可能会受到收音机或电视机的信号干扰。使用本设备时请勿邻近这些信号接收装置。
- 3.手机等无线通讯设备在接听或拨打电话时，可能会对本设备产生干扰。当发生此现象时，请将无线通讯设备与本设备的距离拉远。
- 4.请勿将本设备曝晒在日光直射处，或是放置于高热或通风不良等极端的环境下。过热可能会导致本设备变形或损坏。
- 5.当您将本设备移至温度与湿度差异较大地方时，本设备内部可能会产生水气。若您在此状况下使用本设备，则可能会导致设备故障。

功能说明

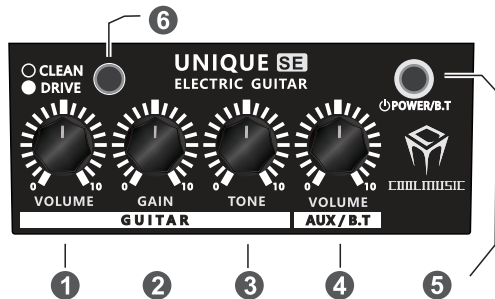

(1)音量旋钮:

该旋钮主要用于调节输入音频的音量大小；

(2)增益旋钮:

该旋钮用于调节输入音频的增益;

(3)音色旋钮：

该旋钮用于调节输入音频的音色

(4)蓝牙音量旋钮:

该旋钮用于调节蓝牙以及'AUX'所输入音频的音量;

(5)蓝牙开关:

a.长按长按2秒开关机，开机显示绿色指示灯

 
b.单击开启蓝牙， 蓝牙连接状态下双击断开蓝牙，进入重新配对状态，

注:打开蓝牙后指示灯闪烁，使用手机搜索蓝牙名称为"UNIQUE SE"的设备，连接上蓝牙后指示灯将常亮.

(6)功能按键：

开机后单按切换到失真音色，亮红色指示灯。

功能说明

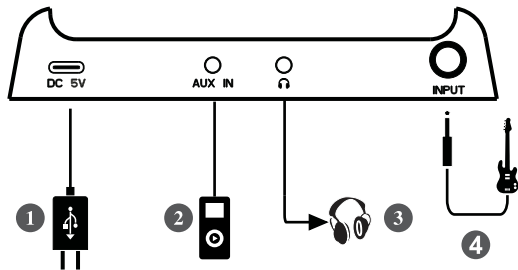

① 充电接口

给音箱充电时请使用带有'DC5V-2A'的供电设备,例如手机适配器、DC电源等;(充电时供电设备与乐器设备会相互干扰进而产生噪音,因此建议您不要边充电边使用本设备)。

② AUX输入接口:

 
该接口用于连接"手机、MP3"等音频设备;

③ 耳机输出接口:

插入耳机后音箱将自动进入静音模式,此时耳机可以起到监听音箱的作用(注:在插入耳机之前建议您先把音量旋钮调小到合适的位置);

④ 输入接口:

该接口主要用于连接'电吉他'等的乐器设备;

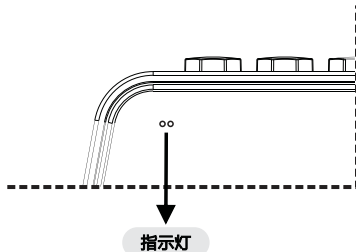

指示灯:

a:适配器连接音箱后,指示灯亮绿色且闪动表示正在充电,充满则灯灭,

b:长按3秒开关机,开机后单击开启蓝牙,有蓝牙设备连接时双击开关按键断开当前连接。开启蓝牙搜索状态蓝牙灯闪动,有设备连接长亮

规格参数

型号： UNIQUE SE
输出功率： 10W；
输入阻抗： INPUT：100 KΩ；
扬声器： 全频喇叭：1.8英寸*2个 4寸低音振膜喇叭1个
频响范围： 22HZ~20KHZ ；
重量： 净重：670g ； 毛重：750g
控件： VOLUME(音量增益旋钮)；GAIN(增益旋钮)； B.T(蓝牙功能旋钮)；POWER(电源开关) TONE(音色旋钮) ； CLEAN/DRIVE(清音/失真)
接口： INPUT (吉他输入接口) ； PHONES (耳机输出接口) ； AUX (音频输入接口) ； DC-5V (音箱充电接口) ；
指示灯： 蓝牙指示灯、面板电量指示灯；
附件： 充电线、说明书、保修卡；

故障诊断

1.音箱无法发出声音： a.可能是音箱电量过低，建议您尽快给音箱充电； b.音箱的音量旋钮或增益旋钮没有被打开，可以尝试将音箱的所有旋钮调大后再做尝试； c.检查一下您的吉他或者手机是否为正常工作状态，若外部设备损坏也可能导致音箱不工作；
2.蓝牙无法连接： a.查看蓝牙是否能正常开启（蓝牙开启时指示灯会闪烁，并伴随有提示音）； b.若蓝牙的指示灯闪烁之后很快又常亮，则可能是蓝牙已被其他设备连接了； c.可能是手机的问题，建议使用另外的一部手机去尝试连接音箱的蓝牙；
3.音箱噪声大： a.尝试把所有外接设备拔出，包括各种乐器设备以及音箱的充电线； b.检查是否为音箱与周围的其他电器设备相互干扰而导致的噪音；
* 若经过上述故障诊断后问题依然没有解决，则请联系客服或代理商或本公司；



品牌：COOLMUSIC

名称：电吉他用音箱

制造商：深圳市酷乐科技有限公司

服务热线：0755 - 89344156

公司官方网站：www.coolmusic-tech.com

地址：深圳市龙岗区园山街道龙腾街28号A栋5楼

邮编：518115